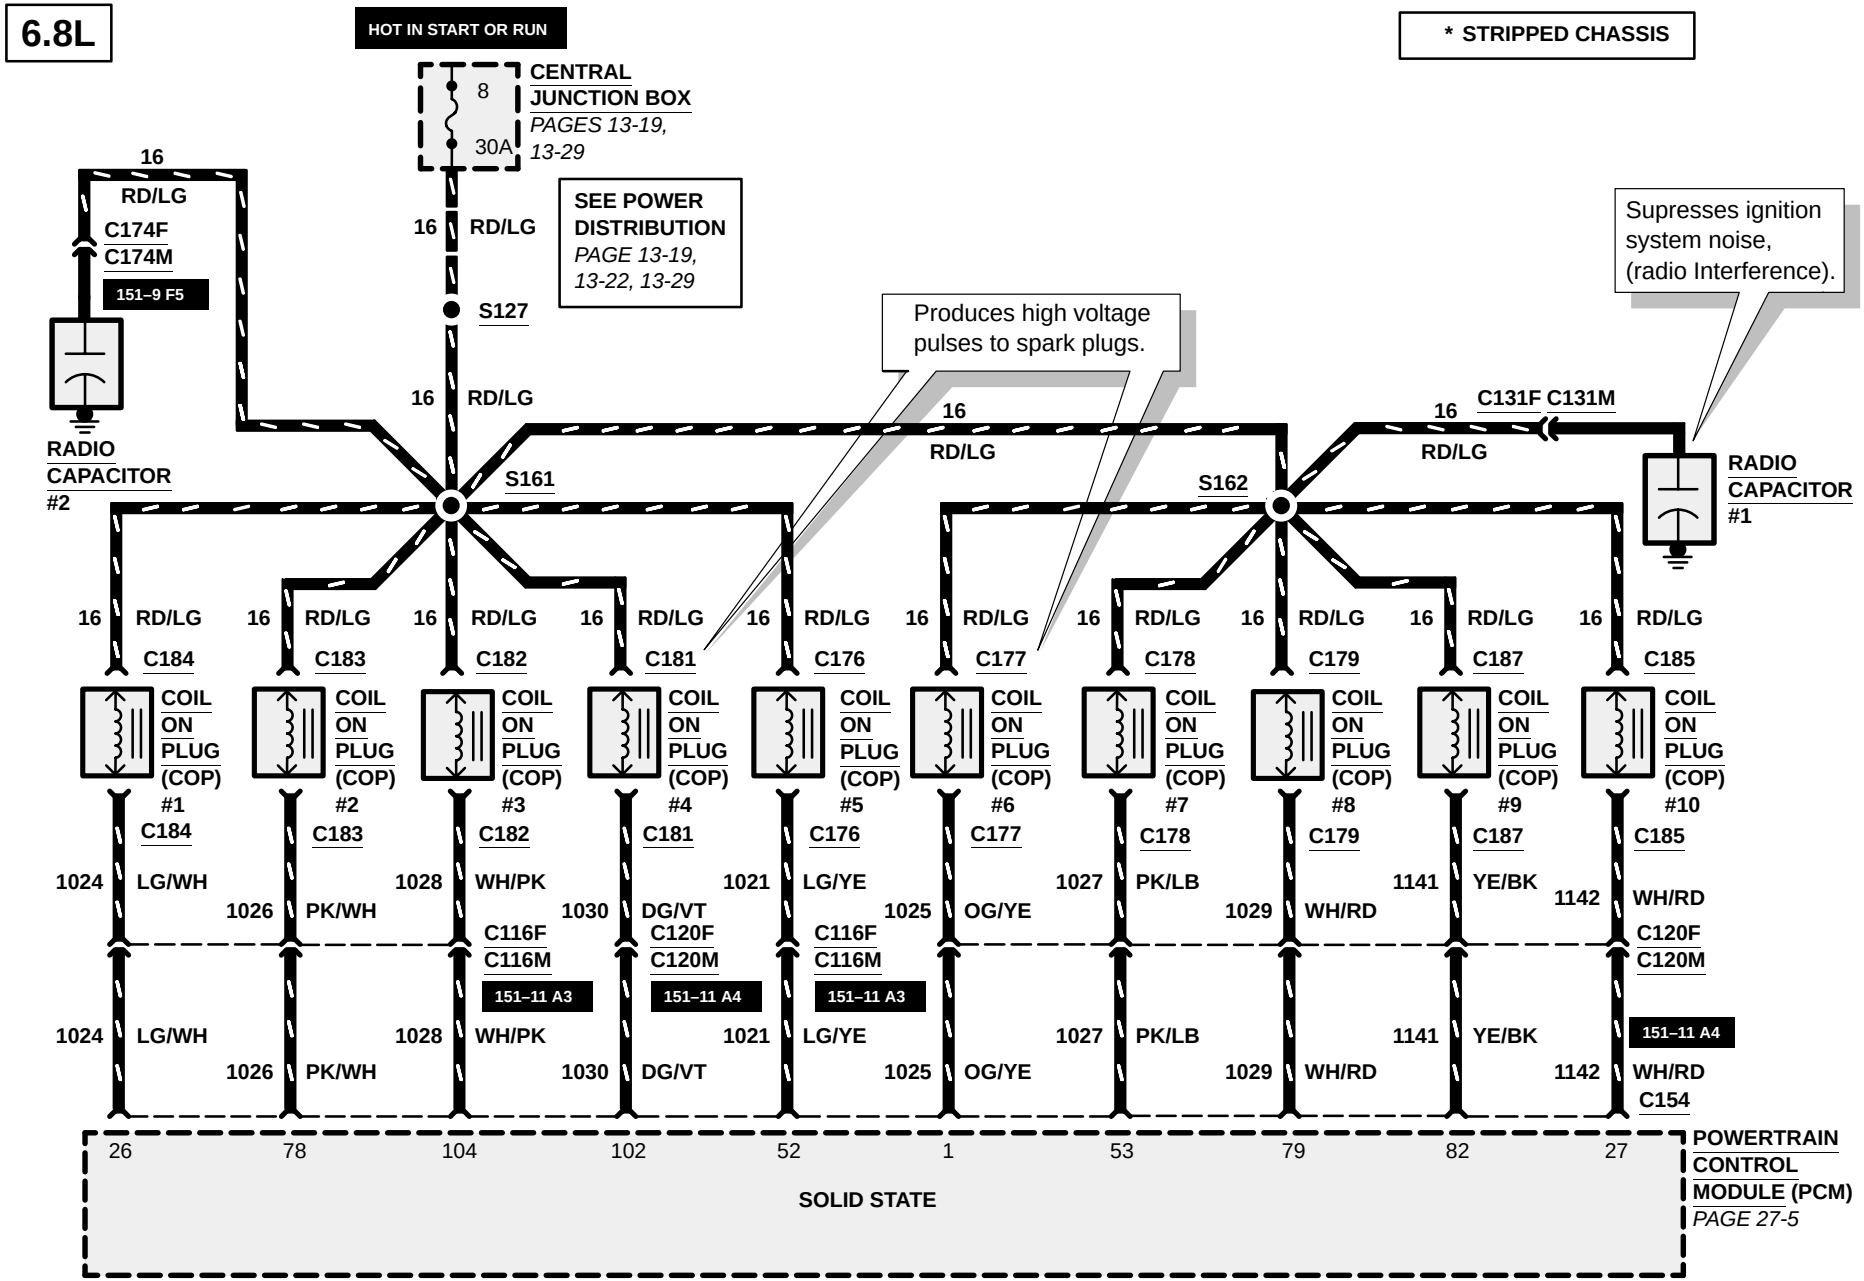
6.8L
HOT IN START OR RUN
* STRIPPED CHASSIS
CENTRAL JUNCTION BOX
PAGES 13-19, 13-29
8
30A
SEE POWER DISTRIBUTION
PAGE 13-19, 13-22, 13-29
16 RD/LG
C174F C174M
151–9 F5
RADIO CAPACITOR #2
S127
S161
S162
Produces high voltage pulses to spark plugs.
Supresses ignition system noise, (radio Interference).
C131F C131M
RADIO CAPACITOR #1
C184
C183
C182
C181
C176
C177
C178
C179
C187
C185
COIL ON PLUG (COP) #1
COIL ON PLUG (COP) #2
COIL ON PLUG (COP) #3
COIL ON PLUG (COP) #4
COIL ON PLUG (COP) #5
COIL ON PLUG (COP) #6
COIL ON PLUG (COP) #7
COIL ON PLUG (COP) #8
COIL ON PLUG (COP) #9
COIL ON PLUG (COP) #10
1024 LG/WH
1026 PK/WH
1028 WH/PK
1030 DG/VT
1021 LG/YE
1025 OG/YE
1027 PK/LB
1029 WH/RD
1141 YE/BK
1142 WH/RD
C116F C116M
151–11 A3
C120F C120M
151–11 A4
C154
26 78 104 102 52 1 53 79 82 27
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
PAGE 27-5