C214 (WH)

14N104

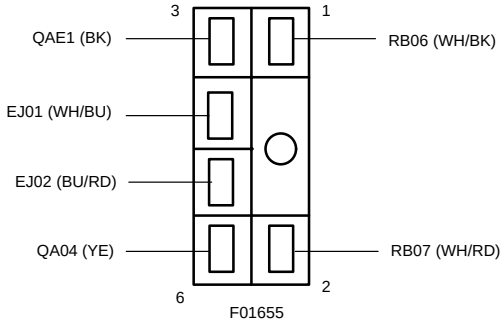

F01655

14A664

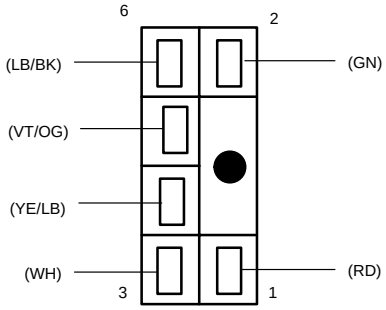

F06183

C215 (WH)

14N104



F02129

E61
Footwell lamp, left front

Pin	Circuit	Circuit Function
1	LM02 (BN)	Voltage supplied at all times (overload protected)
2	LM92 (WH)	Illuminated entry, Ground

C218 (BK)

14A103

N278
Ignition switch

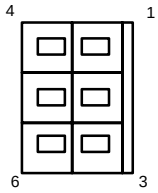

F06116

Pin	Circuit	Circuit Function
1	DA14 (WH/VT)	Voltage supplied at all times (overload protected)
2	DA21 (BN)	Voltage supplied in Start and Run (overload protected)
3	ST01 (RD)	Voltage supplied in Start (overload protected)
4	DA23 (WH/BU)	Voltage supplied in Start (overload protected)
5	DA20 (WH/GN)	Voltage in Run or Accessory (overload protected)
6	DA22 (RD/GN)	Voltage in Run (overload protected)

C220 (BN)

M209
Mode actuator

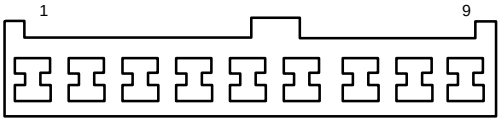

F10059

Pin	Circuit	Circuit Function
1	HA18 (GN/YE)	Mode actuator, from EATC
2	HA17 (GN)	Mode actuator, from EATC
3	HA16 (BU/WH)	Mode actuator, from EATC
4	HA15 (BN/YE)	Mode actuator, from EATC
5	HA14 (BN)	Mode actuator, from EATC
6	HA13 (LB)	Mode actuator, from EATC
7	HA12 (LG/RD)	Mode actuator, from EATC
8	HA11 (LG)	Mode actuator
9	HA04 (BK/RD)	Mode actuator, from EATC