C900

14334

N435
Interior lamp switch, rear

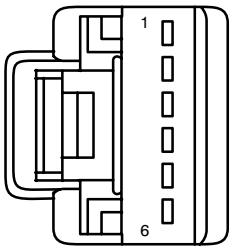

F006179

Pin	Circuit	Circuit Function
1	31S-LB29 (BK/OG)	Ground, Switched
2	–	not used
3	–	not used
4	31-LB32 (BK)	Ground
5	–	not used
6	9-LB32 (BN/WH)	Sensor signal return (reference/ground)

C901a

14334

E19
Interior lamp, rear

F01017

Pin	Circuit	Circuit Function
1	29S-LB29 (OG)	Voltage supplied at all times (overload protected), Switched

C901b

14334

E19
Interior lamp, rear

F01017

Pin	Circuit	Circuit Function
1	31S-LB29 (BK/OG)	Ground, Switched

C903a

14334

E112
Map reading lamp, right front

F01017

Pin	Circuit	Circuit Function
1	29S-LB19 (OG/BU)	Voltage supplied at all times (overload protected), Switched

C903b

14334

E112
Map reading lamp, right front

F01017

Pin	Circuit	Circuit Function
1	31S-LB19 (BK/BU)	Ground, Switched

C905

14334

N435
Interior lamp switch, rear

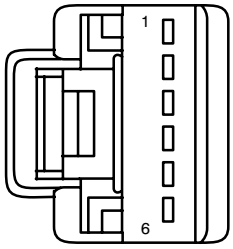

F006179

Pin	Circuit	Circuit Function
1	31S-LB19 (BK/BU)	Ground, Switched
2	–	not used
3	–	not used
4	31-LB20 (BK)	Ground
5	–	not used
6	9-LB20 (BN/BU)	Sensor signal return (reference/ground)