EXCURSION

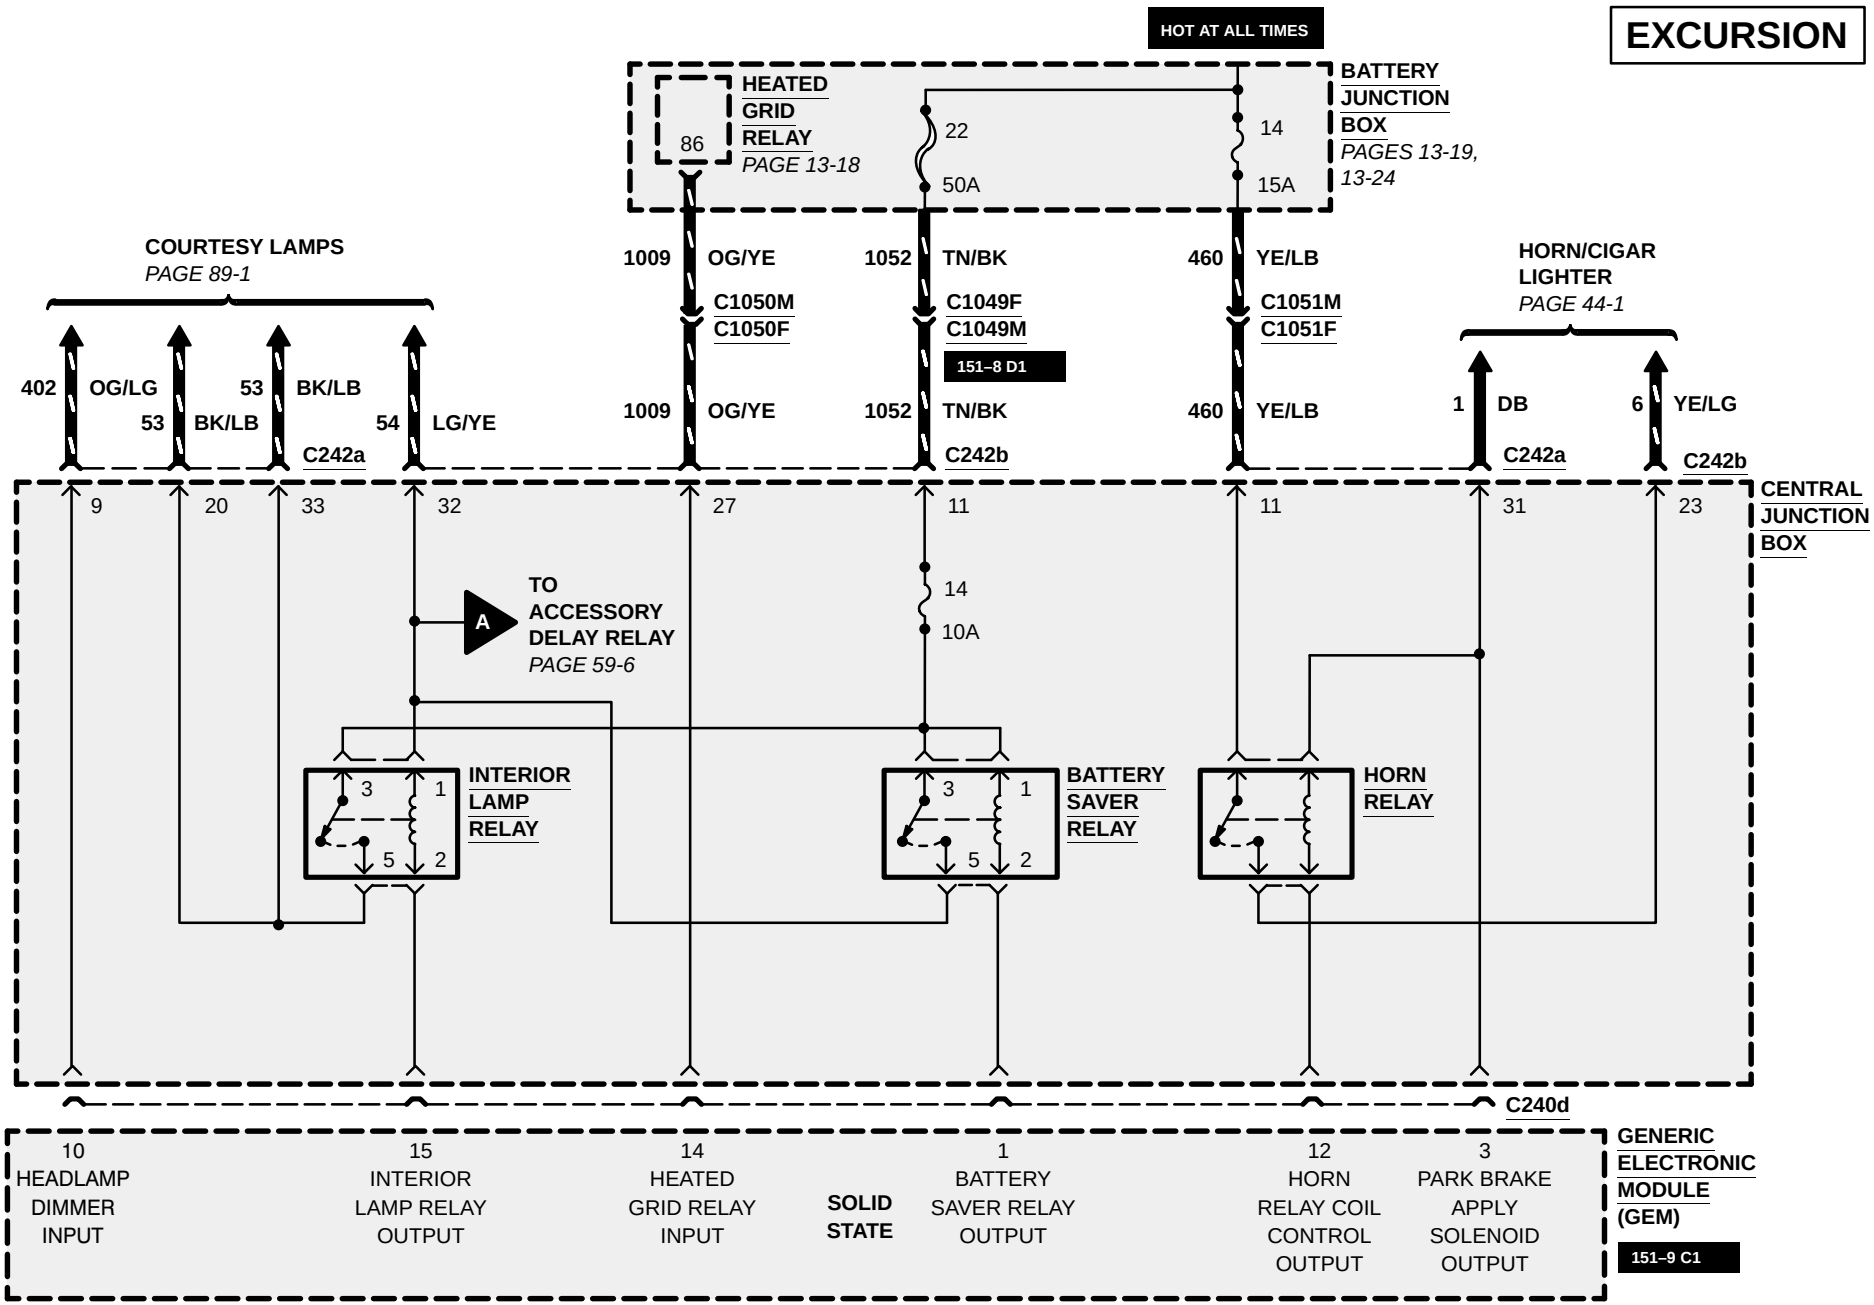
HOT AT ALL TIMES
HEATED GRID RELAY
PAGE 13-18
86
22
50A
14
15A
BATTERY JUNCTION BOX
PAGES 13-19, 13-24
COURTESY LAMPS
PAGE 89-1
402 OG/LG
53 BK/LB
53 BK/LB
54 LG/YE
C242a
1009 OG/YE
C1050M
C1050F
1009 OG/YE
1052 TN/BK
C1049F
C1049M
151–8 D1
1052 TN/BK
C242b
460 YE/LB
C1051M
C1051F
460 YE/LB
HORN/CIGAR LIGHTER
PAGE 44-1
1 DB
C242a
6 YE/LG
C242b
CENTRAL JUNCTION BOX
9
20
33
32
27
11
11
31
23
14
10A
A
TO ACCESSORY DELAY RELAY
PAGE 59-6
INTERIOR LAMP RELAY
BATTERY SAVER RELAY
HORN RELAY
C240d
10 HEADLAMP DIMMER INPUT
15 INTERIOR LAMP RELAY OUTPUT
14 HEATED GRID RELAY INPUT
SOLID STATE
1 BATTERY SAVER RELAY OUTPUT
12 HORN RELAY COIL CONTROL OUTPUT
3 PARK BRAKE APPLY SOLENOID OUTPUT
GENERIC ELECTRONIC MODULE (GEM)
151–9 C1