C4043 (BK)

14A411

Air suspension height sensor (3C131)

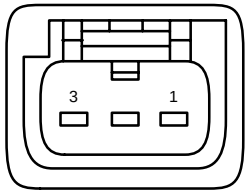

F03241

Pin	Circuit	Circuit function
1	432 (BK/PK)	Air suspension height sensor (3C131), rear, feed
2	427 (PK/BK)	Air suspension height sensor (3C131) to Air suspension module (3C142), signal
3	429 (VT/LG)	Air suspension height sensor (3C131), rear, Power, feed

C4044 (BK)

14A411

Shock absorber solenoid valve, left rear (5A891)

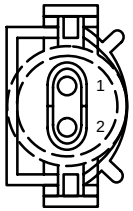

F02031

Pin	Circuit	Circuit function
1	1114 (BN/PK)	Air suspension module (3C142), to, Left, rear, Solenoid
2	57 (BK)	Ground

C4045 (BK)

14A411

Shock absorber solenoid valve, right rear (5A891)

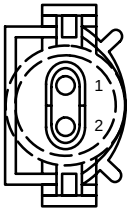

F02031

Pin	Circuit	Circuit function
1	1115 (TN/WH)	Air suspension module (3C142), to, Right, rear, Solenoid
2	57 (BK)	Ground

C4087 (NA)

14A005

Pressure reservoir control switch

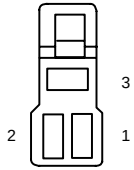

F03301

Pin	Circuit	Circuit function
1	429 (VT/LG)	Air suspension height sensor (3C131), rear, Power, feed
2	–	not used
3	418 (DG/YE)	Air suspension module (3C142), control, feed

C4088

14405

Emergency flasher relay 1

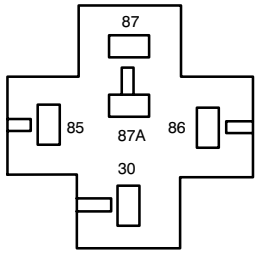

F05165

Pin	Circuit	Circuit function
30	40 (LB/WH)	Voltage supplied at all times (overload protected)
85	57 (BK)	Ground
86	9 (LG/OG)	Turn lamps, feed, left rear
87	9 (LG/OG)	to left package tray lamp
87A	–	not used