C364

14B084

N29
Seat cushion heater,
left front

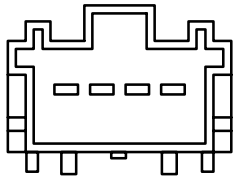

F04139

Pin	Circuit	Circuit function
1	1064 (YE/LB)	Seat cushion heater, driver side, heater, feed
2	1060 (BK/LB)	Seat cushion heater, driver side, Sensor, feed
3	1061 (BN/LB)	Seat cushion heater, driver side, Sensor, return
4	1066 (GY/LB)	Seat back heater, driver side, feed

C365

14B084

N31
Seat back heater,
left front

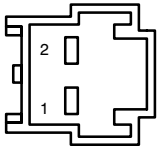

F02077

Pin	Circuit	Circuit function
1	1066 (GY/LB)	Seat back heater, driver side, feed
2	1067 (VT/LB)	Seat back heater, driver side, heater, return

C381

14B084

N317
Safety belt buckle
switch (10B924)

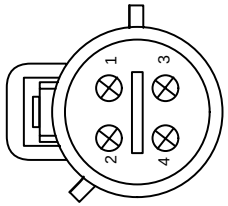

F04269

Pin	Circuit	Circuit function
1	–	not used
2	85 (BN/LB)	Safety belt buckle switch (10B924), input
3	57 (BK)	Ground
4	–	not used

C395

14A005

Y17
Speaker, left rear
(18808)

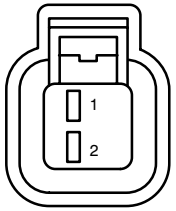

F02069

Pin	Circuit	Circuit function
1	800 (GY/LB)	Speaker, left rear (18808) +
2	801 (TN/YE)	Speaker, left rear (18808) –

C396

14A005

Y19
Speaker, right rear
(18808)

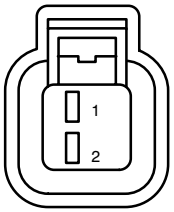

F02069

Pin	Circuit	Circuit function
1	802 (OG/RD)	Speaker, right rear (18808) +
2	803 (BN/PK)	Speaker, right rear (18808) –