C820

19A041

N238
Door ajar switch, passenger side rear (14018)

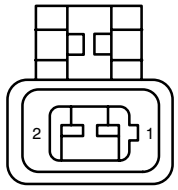

F02117

Pin	Circuit	Circuit function
1	760 (PK/LB)	Door ajar switch, right rear
2	57 (BK)	Ground

C931b

14334/13A724

E238
Interior/map lamps assembly, front

F01017

Pin	Circuit	Circuit function
1	705 (LG/OG)	Battery saver relay, switched power

C927

14334/13A724

E237
Cargo lamp assembly

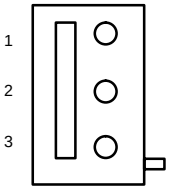

F03081

Pin	Circuit	Circuit function
1	55 (BK/PK)	Cargo lamp, output
2	569 (DG)	Brake pedal position switch (13480), to stoplamps
3	57 (BK)	Ground

C1001

14290

K316
Wiper high/low relay

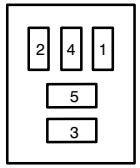

F05064

Pin	Circuit	Circuit function
1	647 (GY/LB)	Wiper high/low relay, control
2	63 (RD)	Voltage in Run or Accessory (overload protected)
3	28 (BK/PK)	Wiper run/park relay, switched power
4	58 (WH)	Wiper high/low relay, switched power, output, Low
5	56 (DB/OG)	Wiper high/low relay, switched power, output, High

C931a

14334/13A724

E238
Interior/map lamps assembly, front

F01017

Pin	Circuit	Circuit function
1	53 (BK/LB)	Interior lamp relay, switched power, output

C1002

14290

K140
Wiper run/park relay

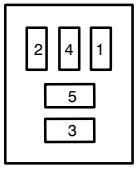

F05064

Pin	Circuit	Circuit function
1	646 (YE/WH)	Wiper run/park relay, control
2	63 (RD)	Voltage in Run or Accessory (overload protected)
3	28 (PK/BK)	Wiper run/park relay, switched power
4	671 (LB)	Wiper run/park relay, switched output
5	63 (RD)	Voltage in Run or Accessory (overload protected)