C1058

14290

Low speed fan control relay

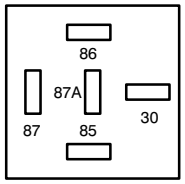

F05051

Pin	Circuit	Circuit function
87	–	not used
87A	229 (RD/OG)	Low speed fan control relay, switched power
86	639 (LG/VT)	Low speed fan control relay, control
	639 (LG/VT)	High speed fan control relay, control
85	361 (RD)	Voltage supplied in Start and Run (overload protected)
30	228 (DB)	Low speed fan control relay, control

C1061 (BN)

12B637

Engine Coolant Temperature (ECT) sender

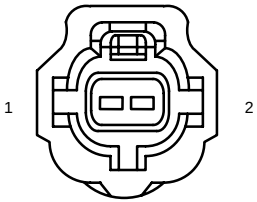

F02027

Pin	Circuit	Circuit function
1	39 (RD/WH)	Engine Coolant Temperature (ECT) sender, input
2	398 (BK/YE)	Ground

C1062 (BK)

12B637

Dual pressure switch (19D594)

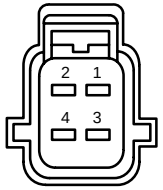

F04207

Pin	Circuit	Circuit function
1	879 (DG/WH)	A/C high pressure switch (19D594), input
2	57 (BK)	Ground
3	347 (BK/YE)	A/C high pressure switch (19D594), switched output
4	441 (RD/YE)	A/C pressure switch, to A/C cycling switch

C1064 (GY)

12B637

Engine Coolant Temperature (ECT) sensor (12A648)

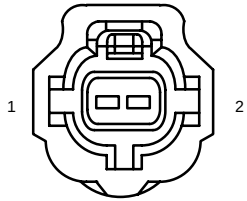

F02027

Pin	Circuit	Circuit function
1	354 (LG/RD)	Engine Coolant Temperature (ECT) sensor (12A648), input
2	359 (GY/RD)	signal, return

C1065 (BK)

12B637

Ignition coil (12029)

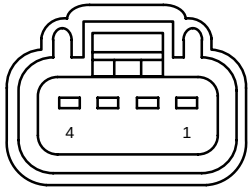

F04221

Pin	Circuit	Circuit function
1	850 (YE/BK)	Ignition coil (12029) A, cylinder 1 and 5
2	852 (YE/WH)	Ignition coil (12029) C, cylinder 2 and 6
3	851 (YE/RD)	Ignition coil (12029) B, cylinder 3 and 4
4	361 (RD)	Voltage supplied in Start and Run (overload protected)