C244 (WH)

14N104

O24
Circuit breaker 2



F02159

Pin	Circuit	Circuit Function
1	PD51 (WH/BU)	Voltage supplied at all times (overload protected)
2	SB01 (WH/RD)	Voltage supplied at all times (overload protected)

C246 (BK)

14N104

N316
Inertia Fuel Shutoff (IFS) switch



F03135

Pin	Circuit	Circuit Function
1	–	not used
2	AVE2 (BK)	Ground
3	AV79 (BK/WH)	Fuel pump, Power

C247 (BN)

14A104

A202
Speed control actuator module

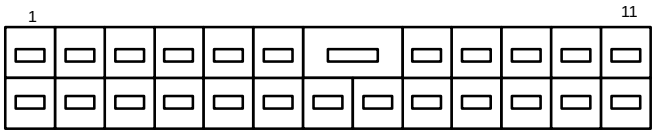

F24005

Pin	Circuit	Circuit Function
1	EJ02 (BU/RD)	Speed control switch, input
2	EJ08 (LG/RD)	Transaxle Control Module (TCM), to Speed control actuator module
3	–	not used
4	EJ40 (BU/WH)	Start inhibit relay, switched power
5	–	not used
6	–	not used
7	EJ14 (BU)	Voltage supplied at all times (overload protected)
8	–	not used
9	–	not used
10	–	not used
11	EJ16 (BN/YE)	Vacuum solenoid
12	EJ01 (WH/BU)	Speed control switch, input
13	EJ09 (YE/BK)	Brake pedal position switch, input
14	EJ10 (GN/YE)	Vehicle Speed Sensor (VSS) +
15	–	not used
16	–	not used
17	–	not used
18	EJ23 (YE)	Cruise set, indicator control
19	EJE1 (BK)	Ground
20	EJ17 (RD/YE)	Cruise set, indicator, switch sense
21	EJ07 (RD)	cruise enabled, indicator, control
22	EJ04 (LB)	Vacuum pump motor
23	EJ06 (OG)	Vent solenoid
24	EJ15 (BN)	Vacuum pump motor