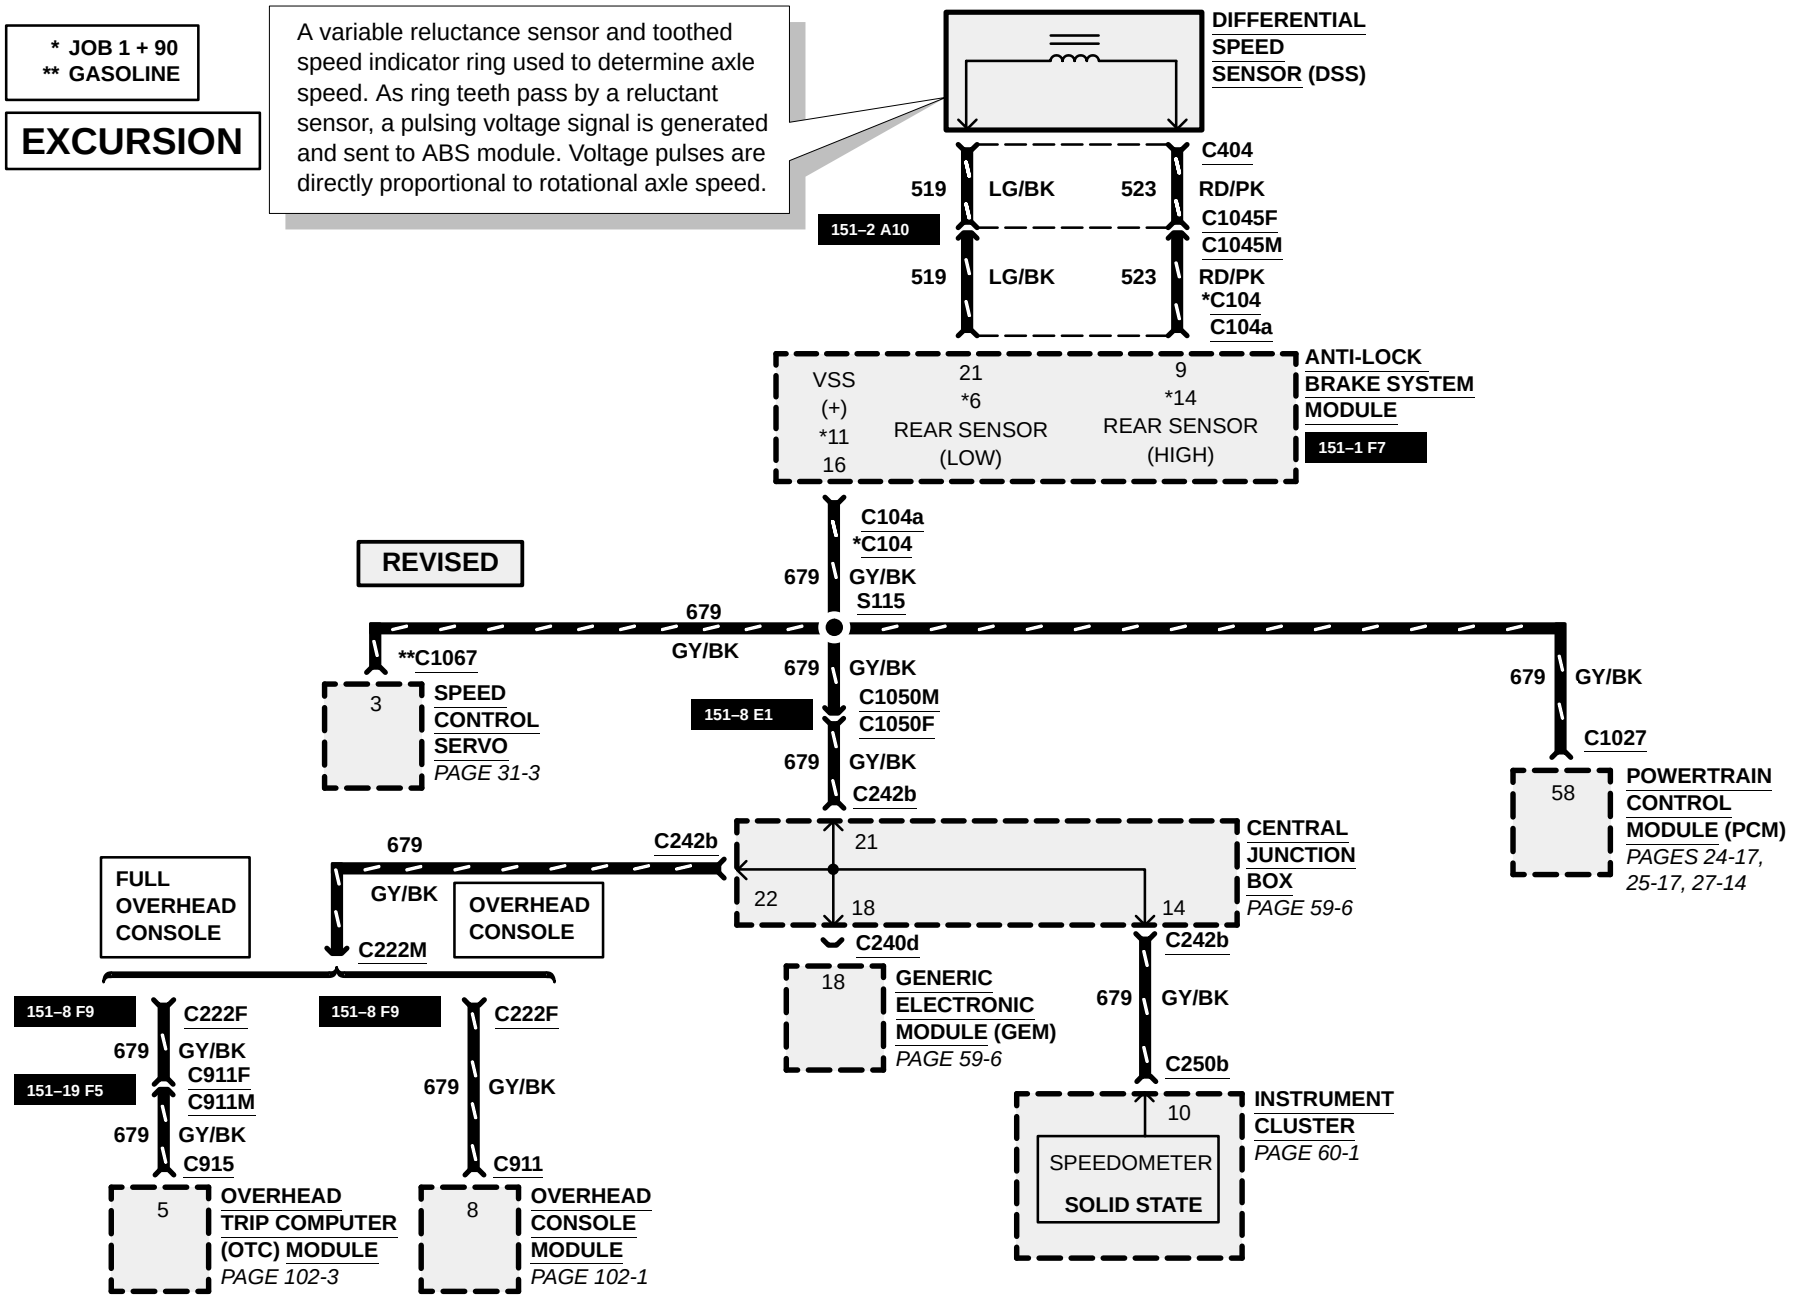
* JOB 1 + 90
** GASOLINE
EXCURSION
A variable reluctance sensor and toothed speed indicator ring used to determine axle speed. As ring teeth pass by a reluctant sensor, a pulsing voltage signal is generated and sent to ABS module. Voltage pulses are directly proportional to rotational axle speed.
DIFFERENTIAL SPEED SENSOR (DSS)
C404
519 LG/BK 523 RD/PK
151–2 A10
C1045F
C1045M
519 LG/BK 523 RD/PK
*C104
C104a
ANTI-LOCK BRAKE SYSTEM MODULE
151–1 F7
VSS (+) *11 16
21 *6 REAR SENSOR (LOW)
9 *14 REAR SENSOR (HIGH)
REVISED
C104a
*C104
679 GY/BK
S115
679
GY/BK
**C1067
3
SPEED CONTROL SERVO
PAGE 31-3
679 GY/BK
151–8 E1
C1050M
C1050F
679 GY/BK
C242b
679 GY/BK
C1027
58
POWERTRAIN CONTROL MODULE (PCM)
PAGES 24-17, 25-17, 27-14
679
C242b
GY/BK
21
22
18
14
CENTRAL JUNCTION BOX
PAGE 59-6
FULL OVERHEAD CONSOLE
OVERHEAD CONSOLE
C222M
C240d
18
GENERIC ELECTRONIC MODULE (GEM)
PAGE 59-6
C242b
679 GY/BK
C250b
151–8 F9
C222F
679 GY/BK
151–19 F5
C911F
C911M
679 GY/BK
C915
5
OVERHEAD TRIP COMPUTER (OTC) MODULE
PAGE 102-3
151–8 F9
C222F
679 GY/BK
C911
8
OVERHEAD CONSOLE MODULE
PAGE 102-1
10
SPEEDOMETER
SOLID STATE
INSTRUMENT CLUSTER
PAGE 60-1