C1019

12B637

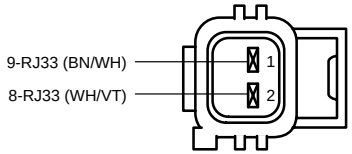

F02121

14B102

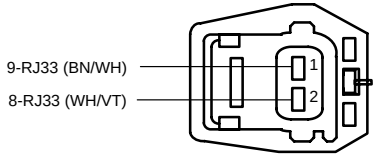

F02055

C1020

13076

E204
High beam lamp, left front

F02037

Pin	Circuit	Circuit function
1	29S-LE15 (OG/BK)	Voltage supplied at all times (overload protected), Switched
2	31S-LE15 (BK/GN)	Ground, Switched

C1021

13076

E205
Low beam lamp, left front

F02037

Pin	Circuit	Circuit function
1	29S-LE16 (OG/GN)	Voltage supplied at all times (overload protected), Switched
2	31S-LE16 (BK/RD)	Ground, Switched

C1022

13076

E164
Park/turn lamp, left front (13411)

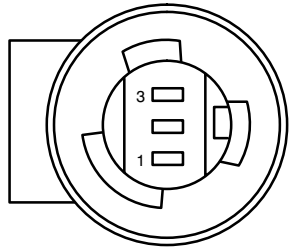

F03113

Pin	Circuit	Circuit function
1	29S-LF7 (OG/BU)	Voltage supplied at all times (overload protected), Switched
2	31S-LF7 (BK/BU)	Ground, Switched
3	31S-LG11 (BK/WH)	Ground, Switched