* FORD POWERSTROKE DIESEL
** SUPERCREWZER

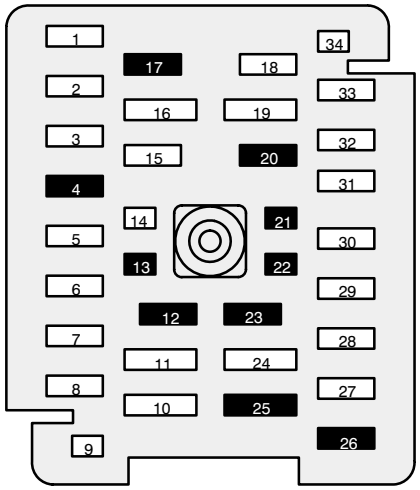

C200
CENTRAL JUNCTION BOX

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
1	797 (LG/PK)	Instrument Cluster Power (Hot at All Times)	17	–	NOT USED
2	797 (LG/PK)	Radio Memory Power (Hot at All Times)	18	391 (RD/YE)	Vehicle Interface Module (VIM)
3	296 (WH/VT)	Main Light Switch Feed	19	1040 (RD/LB)	Fused Ignition Run Feed
4	–	NOT USED	20	–	NOT USED
5	12 (LG/BK)	Headlamp Dimmer Switch to High Beams	21	–	NOT USED
6	16 (RD/LG)	Thermo Switch/Fuel Lift Pump	22	–	NOT USED
	*1140 (PK)	Thermo Switch/Fuel Lift Pump	23	–	NOT USED
7	1045 (DB/WH)	Fused Power Supply Feed to Headlamp Dimmer Switch	24	996 (OG/WH)	Left Window Motor Down
			25	–	NOT USED
8	1002 (BK/PK)	Radio	26	–	NOT USED
	**188 (WH/BK)	Main Light Switch Feed	27	460 (YE/LB)	Horn Relay
9	402 (OG/LG)	Interior Lamp Switch	28	40 (LB/WH)	Fused Power Supply Feed
10	170 (RD/LB)	Power Windows	29	22 (LB/BK)	Power to Brake Pedal Position (BPP) Switch
11	460 (YE/LB)	Horn Relay	30	632 (GY/OG)	Dimmer Switch to High Beams
12	–	NOT USED	31	1 (DB)	Horn Switch
13	–	NOT USED	32	383 (RD/WH)	Power to Electronic Flash
14	**3850 (LG/VT)	Cooling Fan Relay	33	53 (BK/LB)	Overhead Interior Lamps Feed
15	295 (LB/PK)	Fused Ignition Acc Feed	34	** 417 (VT/OG)	Air Suspension Switch Feed
16	297 (BK/LG)	Fused Ignition Acc/Run Feed			