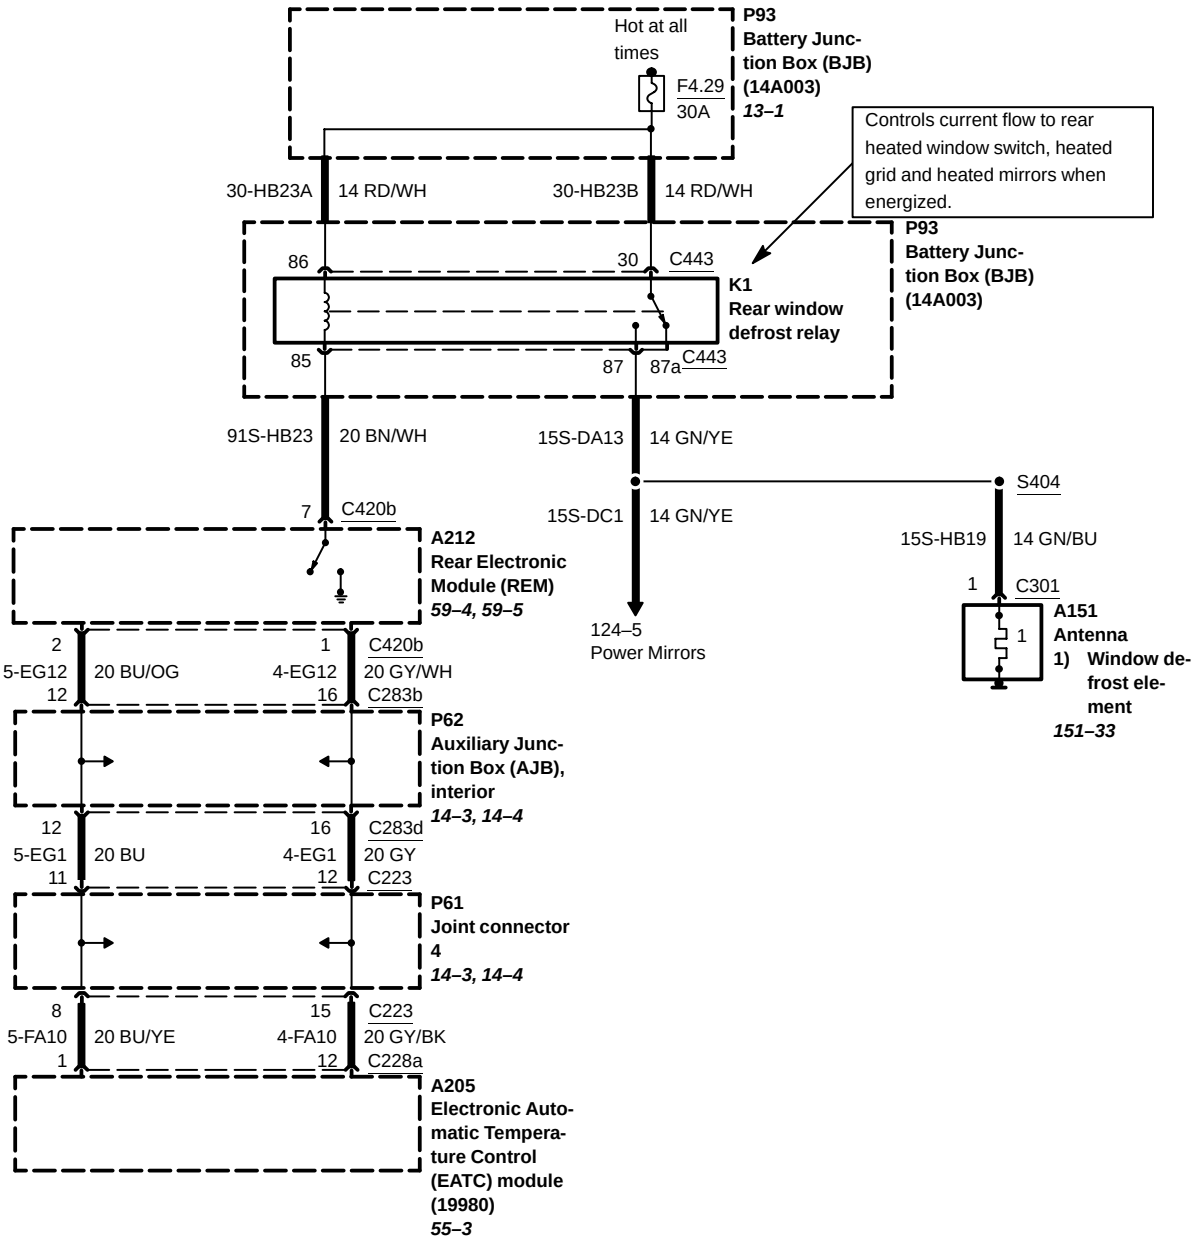
P93
Battery Junction Box (BJB)
(14A003)
13–1
Hot at all times
F4.29
30A
Controls current flow to rear heated window switch, heated grid and heated mirrors when energized.
30-HB23A
14 RD/WH
30-HB23B
14 RD/WH
P93
Battery Junction Box (BJB)
(14A003)
86
30
C443
K1
Rear window defrost relay
85
87
87a
C443
91S-HB23
20 BN/WH
15S-DA13
14 GN/YE
S404
7
C420b
15S-DC1
14 GN/YE
15S-HB19
14 GN/BU
1
C301
A212
Rear Electronic Module (REM)
59–4, 59–5
124–5
Power Mirrors
A151
Antenna
1) Window defrost element
151–33
2
5-EG12
12
20 BU/OG
1
4-EG12
16
C420b
20 GY/WH
C283b
P62
Auxiliary Junction Box (AJB), interior
14–3, 14–4
12
5-EG1
11
20 BU
16
4-EG1
12
C283d
20 GY
C223
P61
Joint connector 4
14–3, 14–4
8
5-FA10
1
20 BU/YE
15
4-FA10
12
C223
20 GY/BK
C228a
A205
Electronic Automatic Temperature Control (EATC) module
(19980)
55–3