C952

8C290

Y16
A/C Compressor clutch



F03073

Pin	Circuit	Circuit Function
1	15S-FA6 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), switched
2	–	not used
3	31-FA6 (BK)	Ground

C953

9H589
12A522

N17
Oil pressure switch

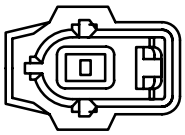
F01016

Pin	Circuit	Circuit Function
1	31S-GC21 (BK/GN)	Ground, switched

C971

18C619

M9
Rear window wiper motor



F02007

Pin	Circuit	Circuit Function
1	15-KA28 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)
2	32-KA28 (WH/RD)	Switched between: Battery voltage, Ground or Open

C973a

14300

M8
Starter motor

F01002

Pin	Circuit	Circuit Function
1	30-BB10 (RD)	Voltage supplied at all times (not overload protected)

C973b

14300

M8
Starter motor


F01014

Pin	Circuit	Circuit Function
1	50-BB10 (GY/BK)	Voltage, ignition switch in Start (not overload protected)

C974 (GY)

14K733

B29
Ice warning sensor

F02005

Pin	Circuit	Circuit Function
1	9-GE38 (BN/YE)	Sensor signal return (reference/ground)
2	8-GE38 (WH/BK)	Sensor signal

C981

14K733

H1
Horn


F01005

Pin	Circuit	Circuit Function
1	30S-GJ6 (RD/YE)	Voltage supplied at all times (not overload protected), switched
	30S-GJ10 (RD/BK)	Voltage supplied at all times (not overload protected), switched