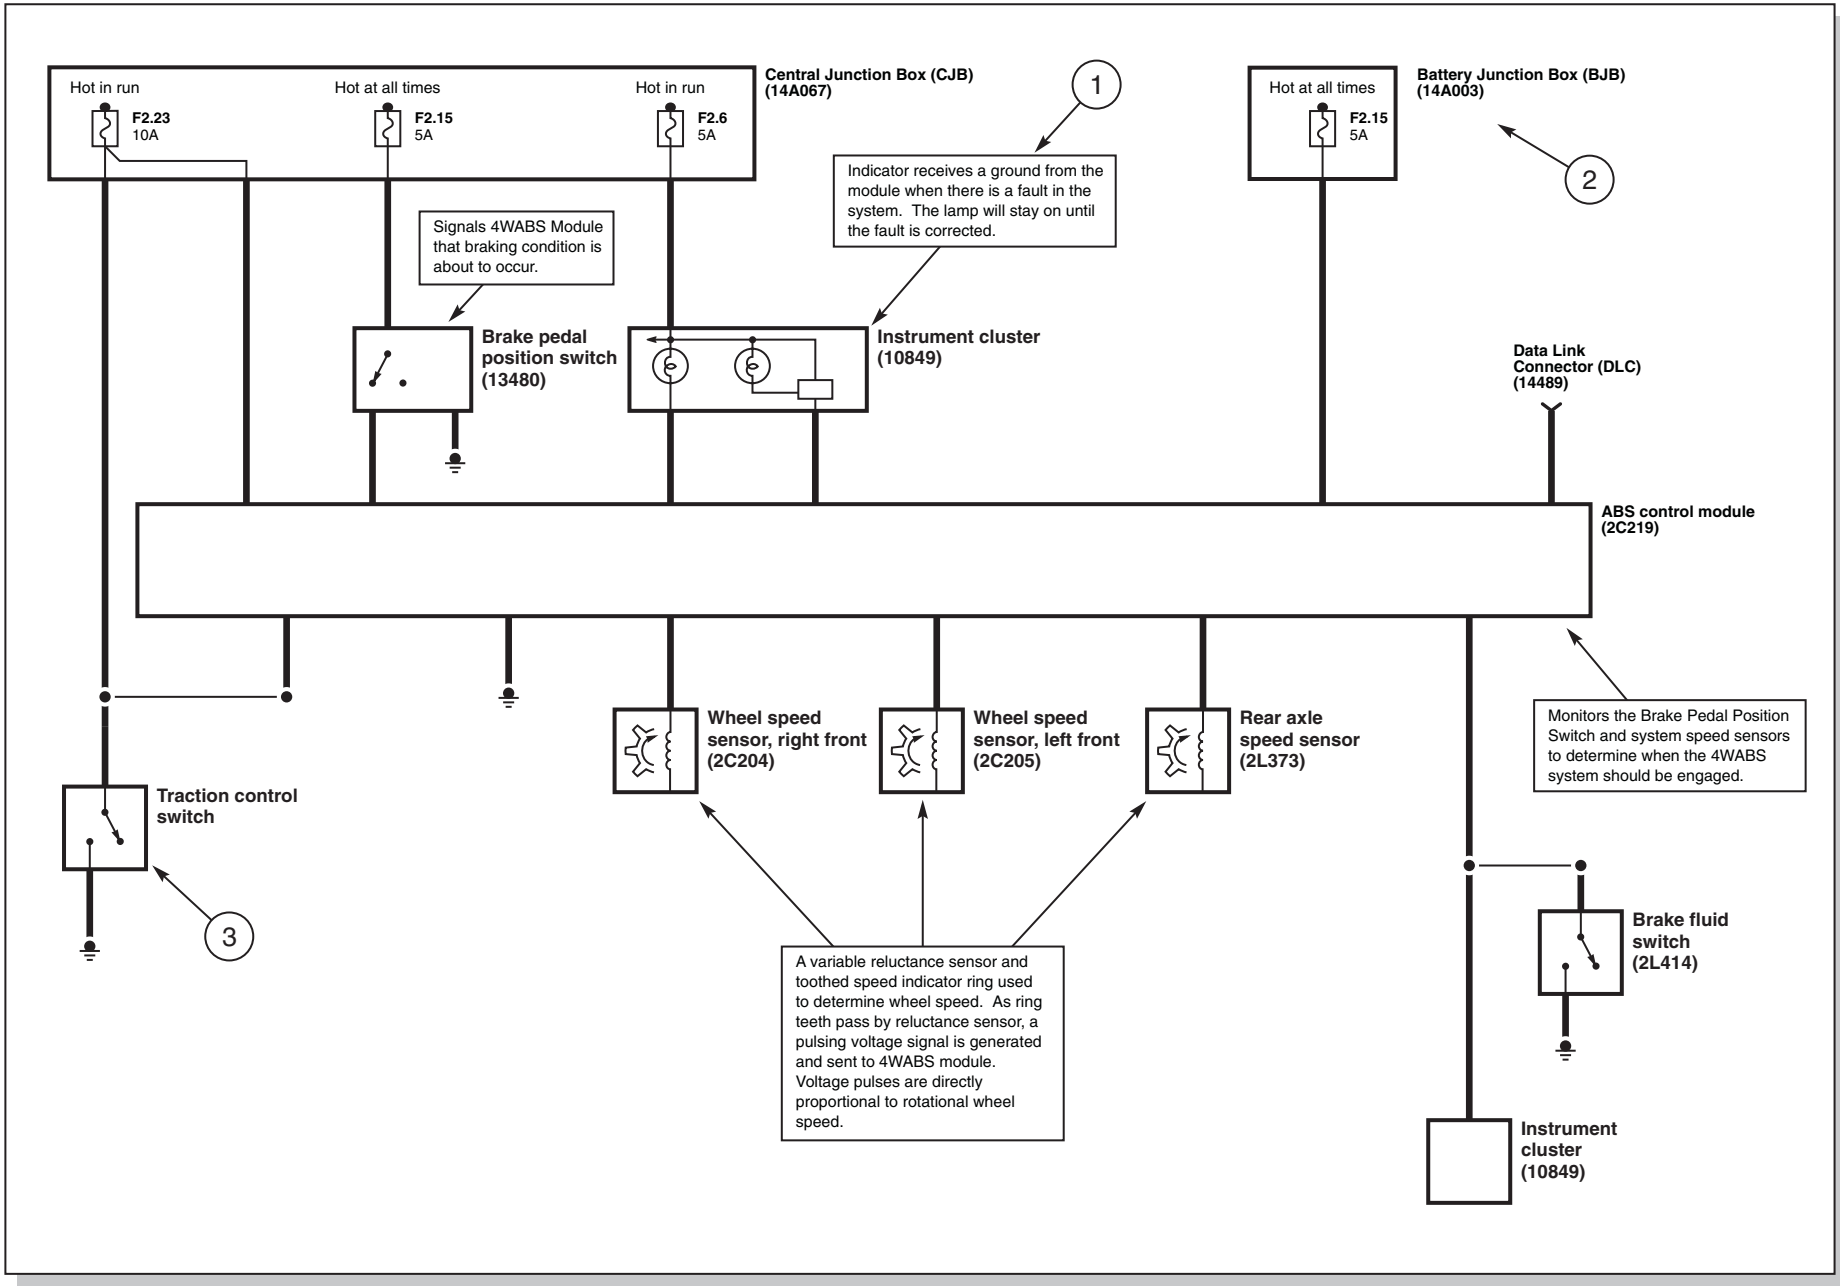
Hot in run
F2.23
10A
Hot at all times
F2.15
5A
Hot in run
F2.6
5A
Central Junction Box (CJB)
(14A067)
1
Indicator receives a ground from the module when there is a fault in the system. The lamp will stay on until the fault is corrected.
Hot at all times
F2.15
5A
Battery Junction Box (BJB)
(14A003)
2
Signals 4WABS Module that braking condition is about to occur.
Brake pedal position switch
(13480)
Instrument cluster
(10849)
Data Link Connector (DLC)
(14489)
ABS control module
(2C219)
Wheel speed sensor, right front
(2C204)
Wheel speed sensor, left front
(2C205)
Rear axle speed sensor
(2L373)
Monitors the Brake Pedal Position Switch and system speed sensors to determine when the 4WABS system should be engaged.
Traction control switch
3
Brake fluid switch
(2L414)
A variable reluctance sensor and toothed speed indicator ring used to determine wheel speed. As ring teeth pass by reluctance sensor, a pulsing voltage signal is generated and sent to 4WABS module. Voltage pulses are directly proportional to rotational wheel speed.
Instrument cluster
(10849)