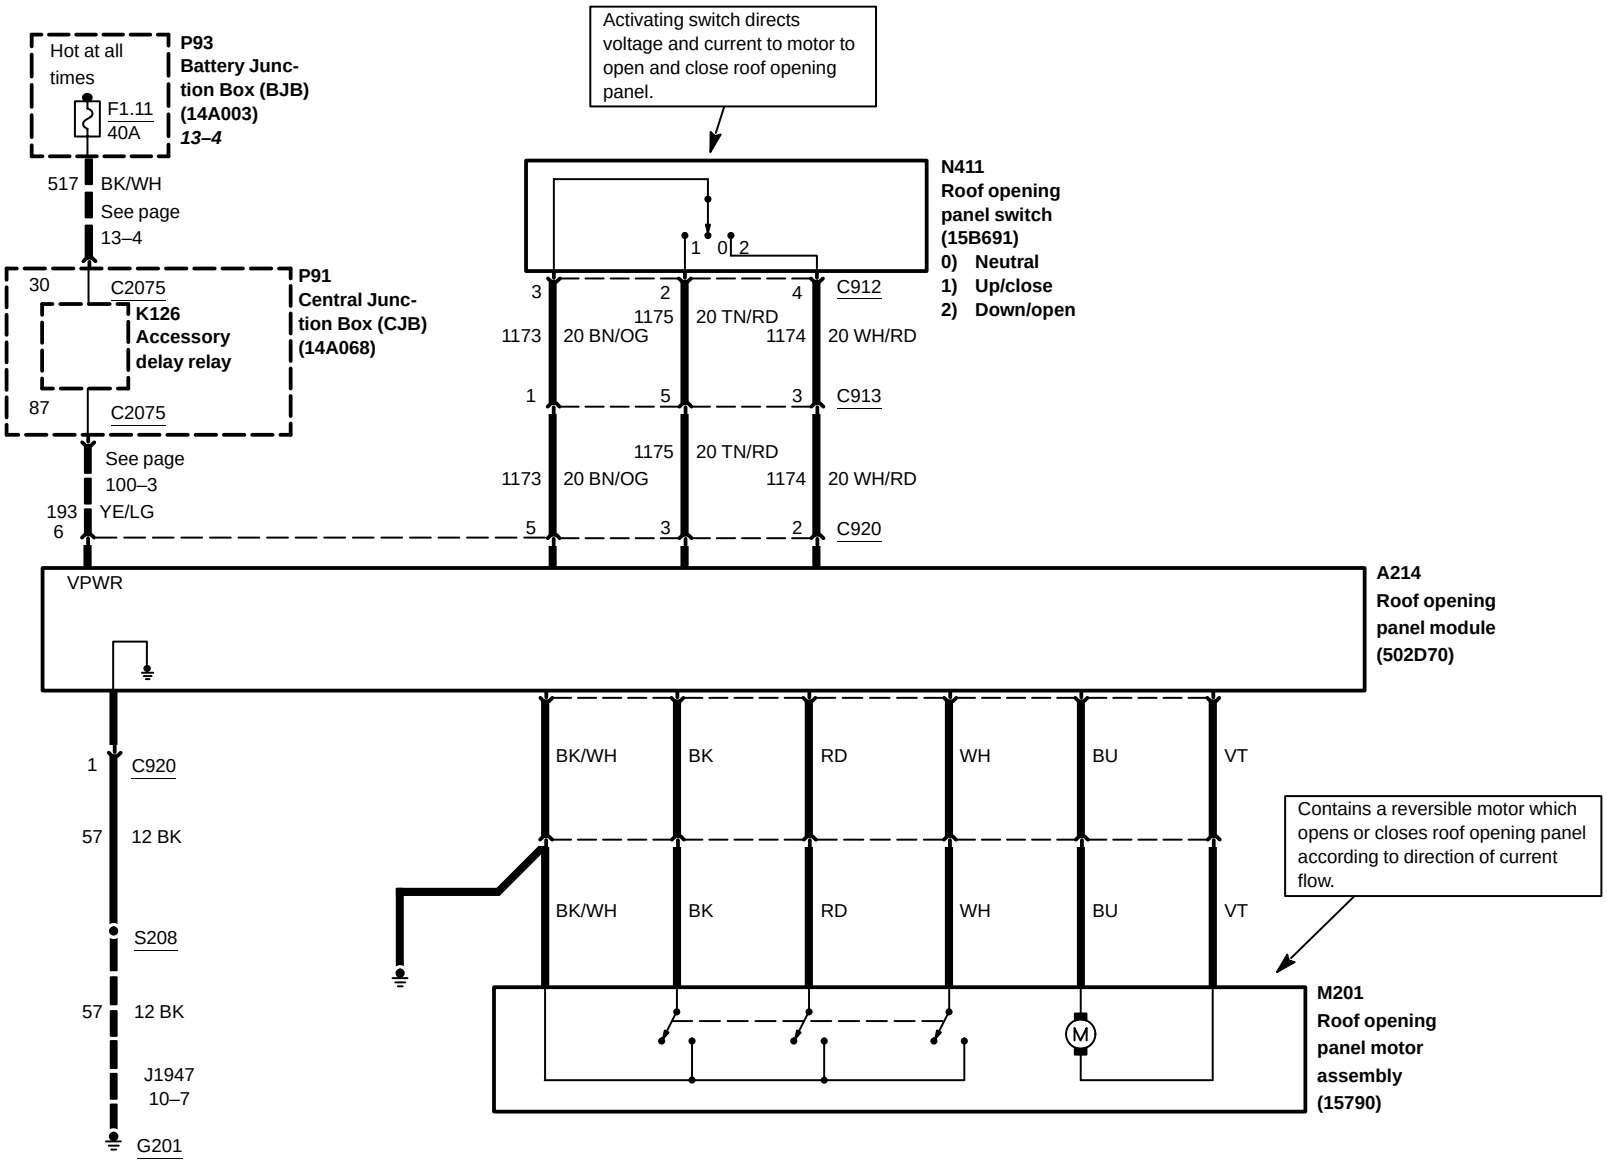
Activating switch directs voltage and current to motor to open and close roof opening panel.
Hot at all times
F1.11
40A
P93
Battery Junction Box (BJB)
(14A003)
13–4
517 BK/WH
See page 13–4
30 C2075
K126
Accessory delay relay
87 C2075
P91
Central Junction Box (CJB)
(14A068)
See page 100–3
193 YE/LG
6
N411
Roof opening panel switch
(15B691)
0) Neutral
1) Up/close
2) Down/open
1 0 2
3 2 4 C912
1173 20 BN/OG 1175 20 TN/RD 1174 20 WH/RD
1 5 3 C913
1173 20 BN/OG 1175 20 TN/RD 1174 20 WH/RD
5 3 2 C920
VPWR
A214
Roof opening panel module
(502D70)
1 C920
57 12 BK
S208
57 12 BK
J1947
10–7
G201
BK/WH BK RD WH BU VT
BK/WH BK RD WH BU VT
Contains a reversible motor which opens or closes roof opening panel according to direction of current flow.
M
M201
Roof opening panel motor assembly
(15790)