C3031a

14C719

Climate controlled seat module,
driver side

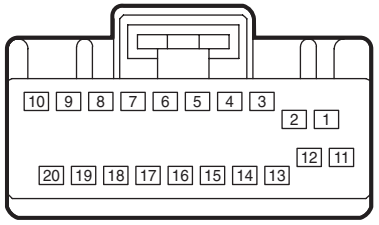

XW4T-14A464-AZA (F)

Pin	Circuit	Circuit Function
1	1064 (YE/LB)	Heated driver seat-seat heater element feed
2	1065 (WH/LB)	Heated driver seat-seat heater element return
3	1553 (BK)	Climate control seat - fan control voltage return
4	1255 (WH/RD)	Heated seat control switch to module-driver seat enable
5	1256 (WH/YE)	Heated seat control switch to module- passenger seat enable
6	1551 (VT/WH)	Climate control seat - hot/ cool signal
7	1018 (LG/OG)	Heated seat control switch-driver temperature adjust (+)
8	—	not used
9	—	not used
10	1565 (VT)	Climate control seat - seat fan 12 volt logic
11	1066 (GY/LB)	Heated driver seat-back heater element feed
12	1067 (VT/LB)	Heated driver seat-back heater element return
13	1552 (RD)	Climate control seat - fan control voltage feed
14	1554 (WH)	Climate control seat - TTL (transistor- transistor logic) fan tach.
15	1550 (WH/OG)	Climate control seat - control switch signal
16	1551 (VT/WH)	Climate control seat - hot/ cool signal
17	1060 (BK/LB)	Heated driver seat- seat sensor, feed
18	1548 (DG/LG)	Climate control seat - cushion temperature sensor signal
19	1549 (DB/OG)	Climate control seat - back temperature sensor signal
20	1062 (RD/LB)	Heated driver seat-back sensor, feed

C3031b

14C719

Climate controlled seat module,
driver side



XW4T-14489-EA (F)

Pin	Circuit	Circuit Function
1	693 (OG)	Module diagnostic
2	1003 (GY/YE)	Fused ignition "run" to module, GEM-input
3	1205 (BK)	General ground (type 4 ground)
4	1566 (RD/YE)	Climate control passenger seat module - fused b+ feed

C3033

14C719

Climate controlled seat fan,
driver side

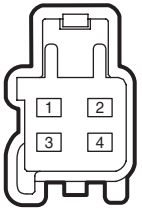

97BG-14A459-YDB (M)

Pin	Circuit	Circuit Function
1	1565 (VT)	Climate control seat - seat fan 12 volt logic
2	1554 (WH)	Climate control seat - TTL (transistor- transistor logic) fan tach.
3	1552 (RD)	Climate control seat - fan control voltage feed
4	1553 (BK)	Climate control seat - fan control voltage return