C963

9H589

ZETEC–E

B225
Fuel rail pressure
transducer sensor

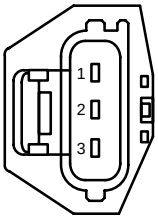

F03124

Pin	Circuit	Circuit Function
1	7-RJ11 (YE/GN)	Voltage D.C. supplied at all times (sensor)
2	9-RJ11 (BN/GN)	Sensor signal return (reference/ground)
3	8-RJ11 (WH/GN)	Sensor signal

C964

12A522

B113
Fuel tank pressure
transducer sensor

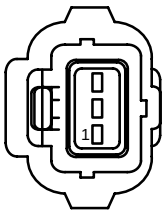

F03093

Pin	Circuit	Circuit Function
1	7-RJ13 (YE/VT)	Voltage D.C. supplied at all times (sensor)
2	9-RJ13 (BN/WH)	Sensor signal return (reference/ground)
3	8-RJ13 (WH/VT)	Sensor signal

C971

14405, 14A584

M9
Rear window wiper
motor



F02007

Pin	Circuit	Circuit Function
1	15-KA28 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)
2	32-KA28 (WH/RD)	Switched between: Battery voltage, Ground or Open

C972

14K733

V7
A/C Compressor
clutch diode



F02005

Pin	Circuit	Circuit Function
1	31-FA7 (BK)	Ground
2	15S-FA7 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched

C974

14K733

F02005

B29
Ice warning sensor

Pin	Circuit	Circuit Function
1	8-GE38 (WH/BK)	Sensor signal
2	9-GE38 (WH/BK)	Sensor signal return (reference/ground)