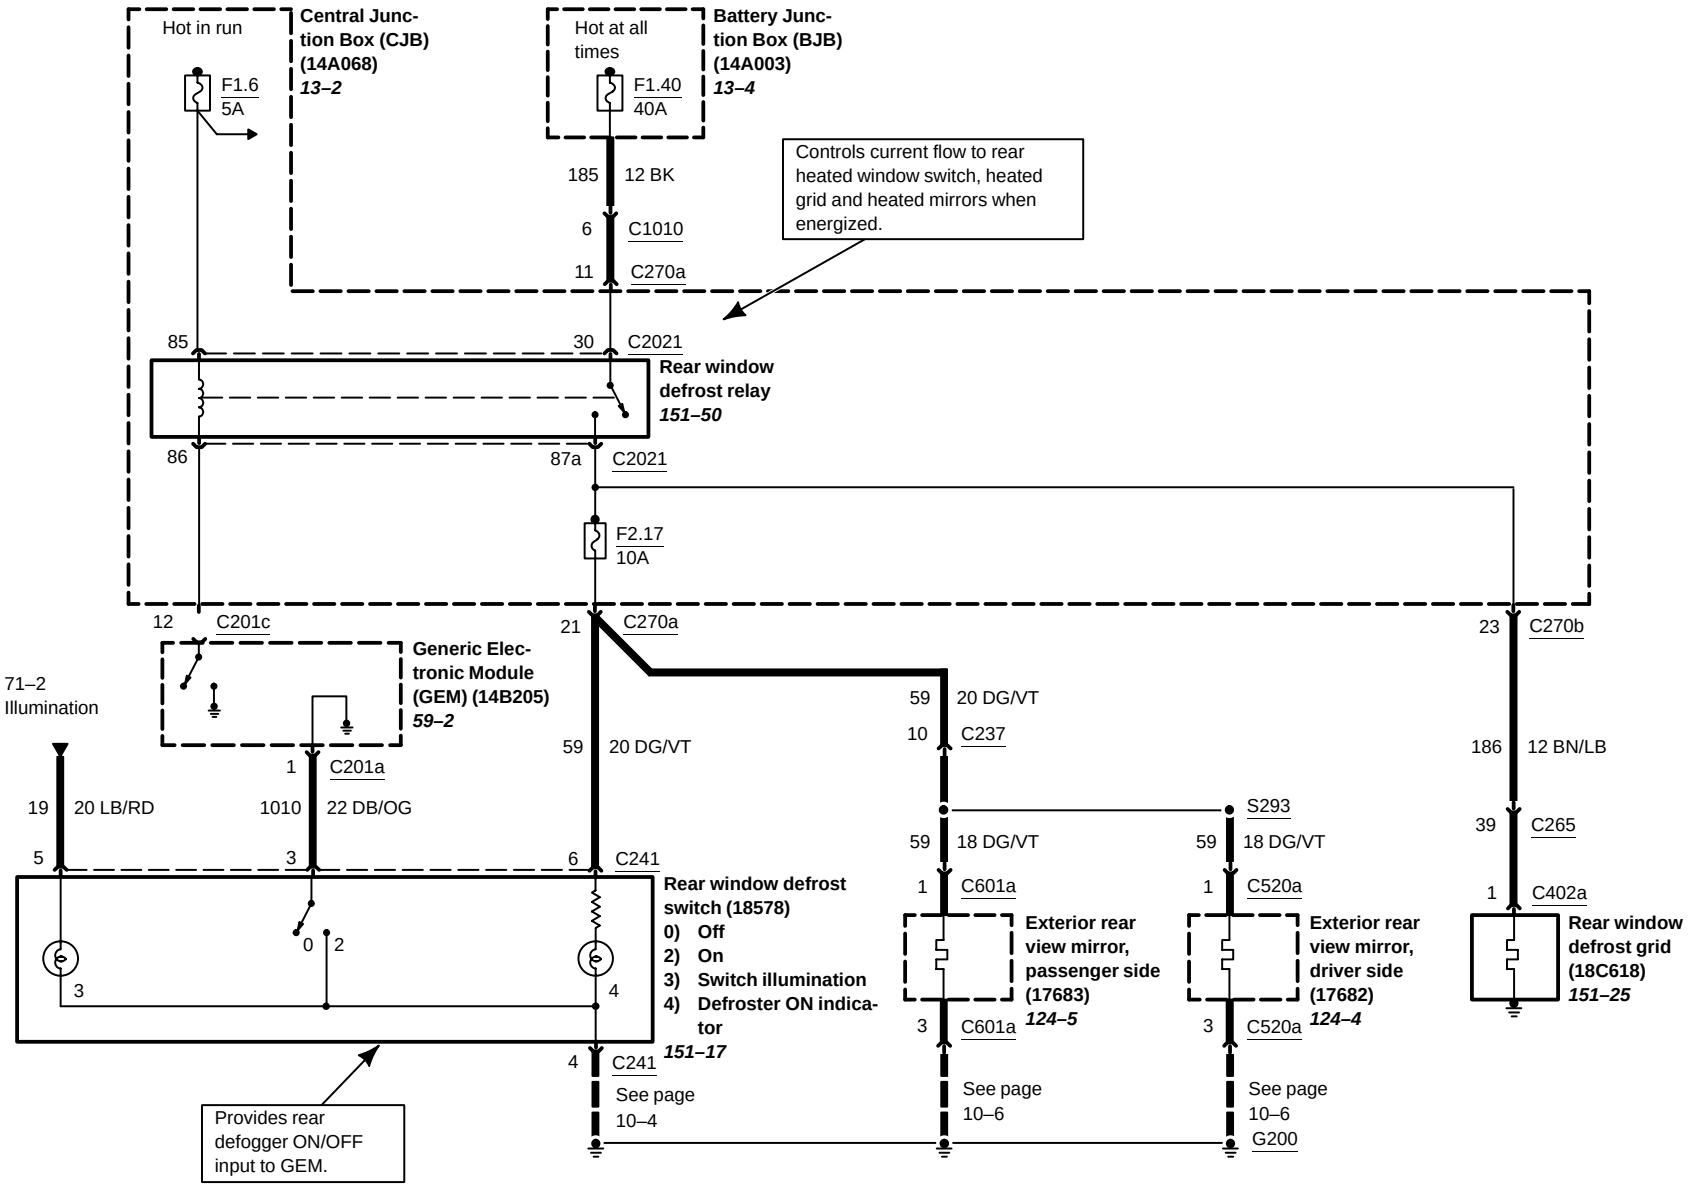
Hot in run
Central Junction Box (CJB) (14A068) 13–2
F1.6 5A
Hot at all times
Battery Junction Box (BJB) (14A003) 13–4
F1.40 40A
185 12 BK
6 C1010
11 C270a
Controls current flow to rear heated window switch, heated grid and heated mirrors when energized.
85
30 C2021
Rear window defrost relay 151–50
86
87a C2021
F2.17 10A
12 C201c
Generic Electronic Module (GEM) (14B205) 59–2
21 C270a
23 C270b
71–2 Illumination
1 C201a
19 20 LB/RD
1010 22 DB/OG
59 20 DG/VT
59 20 DG/VT
10 C237
186 12 BN/LB
5
3
6 C241
59 18 DG/VT
1 C601a
59 18 DG/VT
1 C520a
39 C265
1 C402a
Rear window defrost switch (18578)
0) Off
2) On
3) Switch illumination
4) Defroster ON indicator 151–17
0 2
3
4
Exterior rear view mirror, passenger side (17683) 124–5
Exterior rear view mirror, driver side (17682) 124–4
Rear window defrost grid (18C618) 151–25
3 C601a
3 C520a
4 C241
See page 10–4
See page 10–6
See page 10–6
G200
Provides rear defogger ON/OFF input to GEM.