C538

14C719

Seat heater switch, driver side

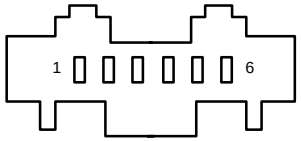

F06325

Pin	Circuit	Circuit function
1	1020 (DG/VT)	Climate controlled seat module – High
2	296 (WH/VT)	Voltage in Run or Accessory (overload protected)
3	1019 (TN/LB)	indicator, High –
4	1018 (LG/OG)	indicator, Low –
5	1255 (WH/RD)	Climate controlled seat module – Low
6	57 (BK)	Ground

C543

14A005

Exterior door handle switch, left front



F01159

Pin	Circuit	Circuit function
1	465 (WH/LB)	Illuminated entry signal

C602a (GY)

14A005

Door ajar switch, passenger side front (14018)



F01053

Pin	Circuit	Circuit function
1	627 (BK/OG)	Door ajar indicator, control

C602b (BK)

14A005

Door ajar switch, passenger side front (14018)

F01067

Pin	Circuit	Circuit function
1	57 (BK)	Ground

C603 (WH)

14A005

Door lock actuator, passenger side (218A42)

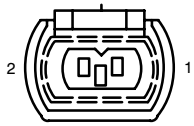

F02116

Pin	Circuit	Circuit function
1	118 (PK/OG)	passenger door, Unlock, output
2	117 (PK/BK)	Door lock, output