C238

14401

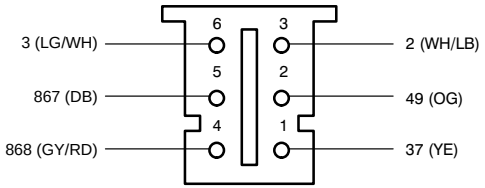

F06089

14A411

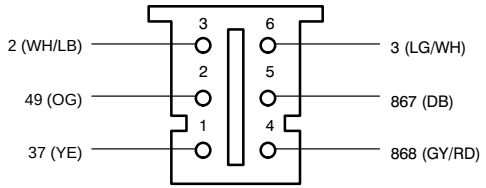

F06089

C248

12A581

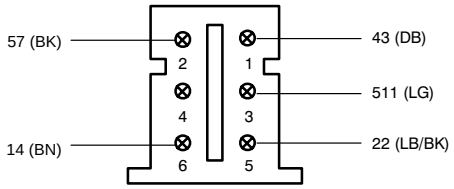

F06089

14A348

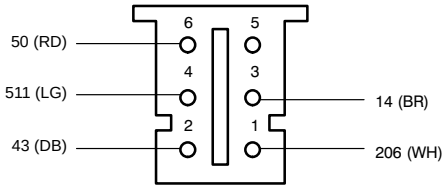

F06089

C250

14401/14A200

N278
Ignition switch
(11572)

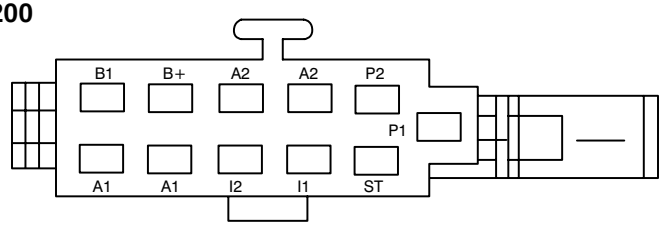

F11039

Pin	Circuit	Circuit function
A1	–	not used
A1	297 (BK/LG)	Voltage in Run or Accessory (overload protected)
A2	687 (GY/YE)	Voltage in Run (overload protected)
A2	687 (GY/YE)	Voltage in Run (overload protected)
B+	37 (YE)	Voltage supplied at all times (overload protected)
B+	37 (YE)	Voltage supplied at all times (overload protected)
I1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
I2	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
ST	33 (WH/PK)	switched power, to starter solenoid
P1	531 (DG/YE)	Brake fluid level switch (2L414), signal
P2	41 (BK/LB)	Voltage in Run (overload protected)