Master window adjust switch (14529)

Schematic

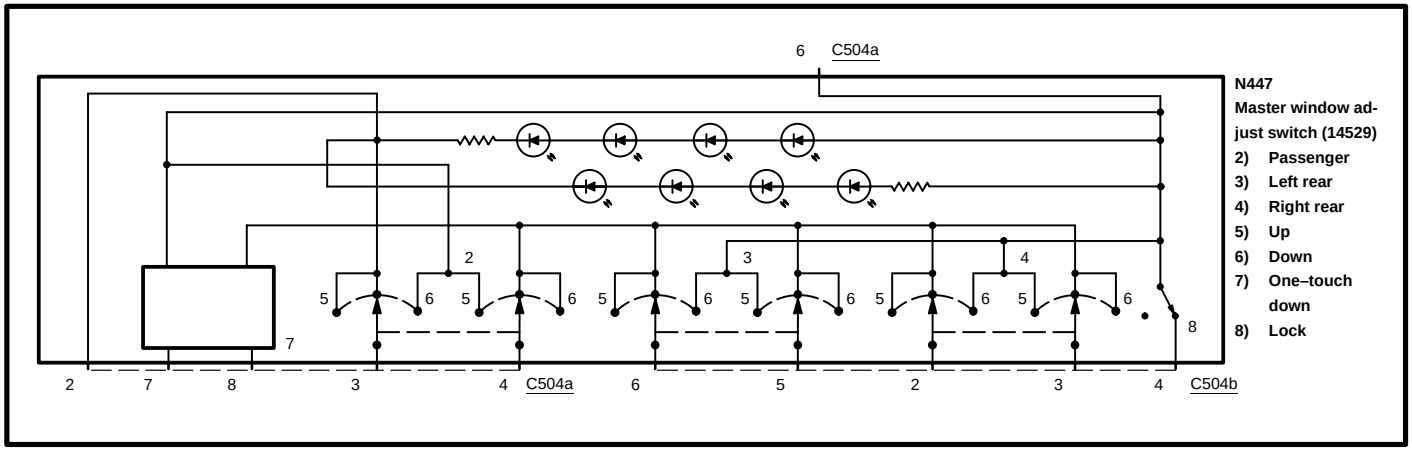

Terminals

C504a

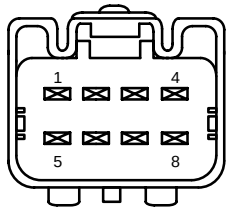

F08359

C504b

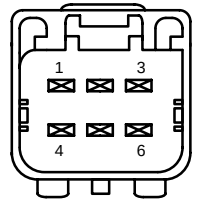

F06343

Component testing procedure

Circuit to test	Connect self–powered test light or ohmmeter to terminals	Move switch to these positions	A good switch will indicate
Switch lock	6, C504a and 4, C504b	Lock On	Closed circuit
		Lock Off	Open circuit
Left front window circuit	6, C504a and 8, C504a	Up	Closed circuit
	6, C504a and 7, C504a	Down	Closed circuit
	2, C504a and 8, C504a 2, C504a and 7, C504a	Rest	Closed circuit
Right front window circuit	6, C504a and 4, C504a	Up	Closed circuit
	6, C504a and 3, C504a	Down	Closed circuit
	2, C504a and 4, C504a 2, C504a and 3, C504a	Rest	Closed circuit
Left rear window circuit	6, C504a and 5, C504b	Up	Closed circuit
	6, C504a and 6, C504b	Down	Closed circuit
	2, C504a and 5, C504b 2, C504a and 6, C504b	Rest	Closed circuit
Right rear window circuit	6, C504a and 3, C504b	Up	Closed circuit
	6, C504a and 2, C504b	Down	Closed circuit
	2, C504a and 3, C504b 2, C504a and 2, C504b	Rest	Closed circuit