C4175 (BK)

13A409

Quarter window
open relay

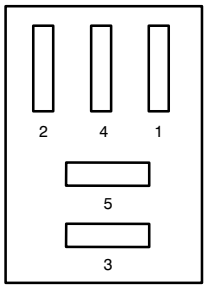

F05110

Pin	Circuit	Circuit function
1	1941 (YE/LB)	Power quarter window switch, Open, output
2	57 (BK)	Ground
3	1156 (YE/RD)	Quarter window open relay, output
4	57 (BK)	Ground
5	194 (PK)	Accessory delay relay, output

C4176 (BK)

13A409

Quarter window
close relay

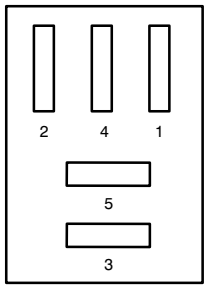

F05110

Pin	Circuit	Circuit function
1	1942 (RD/YE)	Power quarter window switch, Close, output
2	57 (BK)	Ground
3	1157 (WH/RD)	Quarter window close relay, output
4	57 (BK)	Ground
5	194 (PK)	Accessory delay relay, output