C2148

14401

Seat heater switch, passenger side



F06309

Pin	Circuit	Circuit function
1	31-HC9 (BK)	Ground
2	8-HC18 (WH/GN)	Sensor signal
3	32-HC18 (WH/GN)	Switched between: Battery voltage, Ground or Open
4	33-HC18 (YE/GN)	Switched between: Battery voltage, Ground or Open
5	64-HC9 (BU/BK)	Switch illumination
6	10-HC18 (GY/OG)	Signal 2 (Y–direction, reverse, downward)

C2152a

14A005

Heated wiper park

F01031

Pin	Circuit	Circuit function
1	31-HB12 (BK/YE)	Ground

C2152b

14A005

Heated wiper park

F01079

Pin	Circuit	Circuit function
1	30S-HB12 (RD/YE)	Voltage supplied at all times (not overload protected), switch

C2243

14A005

Ignition transformer capacitor 3 (18801)



F02185

Pin	Circuit	Circuit function
1	29S-LB20 (OG)	Switched System Power (SSP)
2	9-LB12 (BN)	Sensor signal return (reference/ground)

C2250 (GN)

14401

Steering column position switch

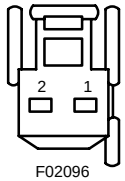

F02096

Pin	Circuit	Circuit function
1	8-AL10 (WH)	Sensor signal
2	9-AL10 (BN)	Sensor signal return (reference/ground)