Seat adjust switch, passenger side front

Schematic

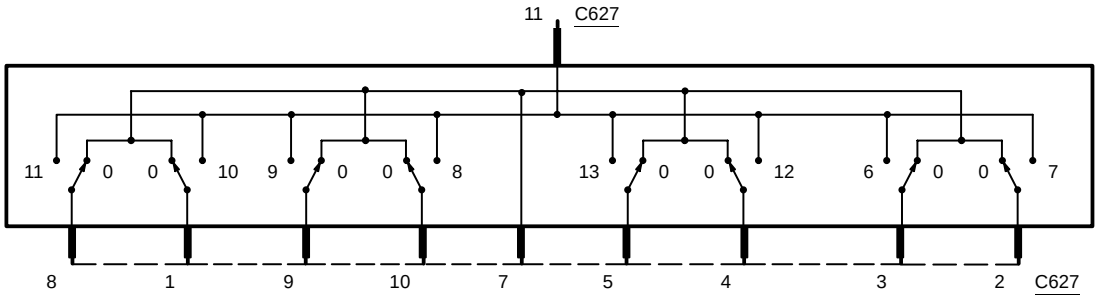

Seat adjust switch, passenger side front

- **0)** Rest
- **6)** Backrest forward
- **7)** Backrest rearward
- **8)** Seat forward
- **9)** Seat rearward
- **10)** Front height up
- **11)** Front height down
- **12)** Rear height up
- **13)** Rear height down

Terminals

C627

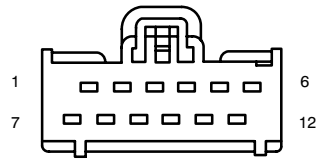

F12137

Component testing procedure

Circuit to test	Connect self–powered test light or ohmmeter to terminals	Move switch to these positions	A good switch will indicate
Power and Ground Checks Before Any Other Tests	7 and 1, 2, 3, 4, 5, 8, 9, 10	Rest	Closed circuit
	7 and 11 11 and 1, 2, 3, 4, 5, 8, 9, 10	Rest	Open circuit
Front height circuit	11 and 1	Up	Closed circuit
	8 and 7	Up	Closed circuit
	11 and 8	Down	Closed circuit
	1 and 7	Down	Closed circuit
Rear height circuit	11 and 4	Up	Closed circuit
	7 and 5	Up	Closed circuit
	11 and 5	Down	Closed circuit
	7 and 4	Down	Closed circuit
Forward/rearward circuit	11 and 10	Forward	Closed circuit
	9 and 7	Forward	Closed circuit
	11 and 9	Rearward	Closed circuit
	10 and 7	Rearward	Closed circuit
Backrest circuit	11 and 3	Forward	Closed circuit
	2 and 7	Forward	Closed circuit
	11 and 2	Rearward	Closed circuit
	3 and 7	Rearward	Closed circuit