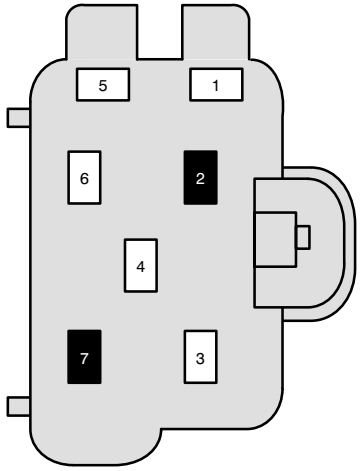

C505

LEFT FRONT DOOR LOCK SWITCH

PIN	CIRCUIT	CIRCUIT FUNCTION
1	57 (BK)	Ground
2	–	NOT USED
3	120 (PK/LG)	Left Switch (Lock)
4	57 (BK)	Ground
5	296 (WH/VT)	Switch Illumination
6	120 (PK/LG)	Left Switch (Unlock)
7	–	NOT USED

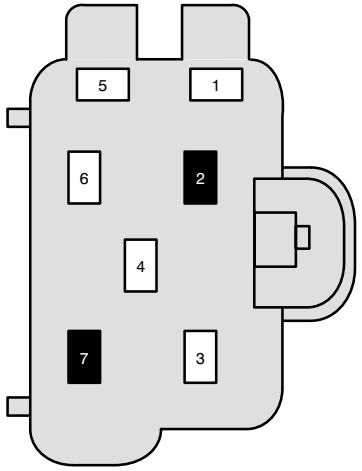

C605

RIGHT FRONT DOOR LOCK SWITCH

PIN	CIRCUIT	CIRCUIT FUNCTION
1	57 (BK)	Ground
2	–	NOT USED
3	119 (PK/YE)	Right Switch (Lock)
4	57 (BK)	Ground
5	296 (WH/VT)	Switch Illumination
6	120 (PK/LG)	Right Switch (Unlock)
7	–	NOT USED

CONNECTOR REFERENCE LIST

CONNECTOR	SECTION-PAGE
C201	13-34