C220c (WH)

14401

Instrument cluster

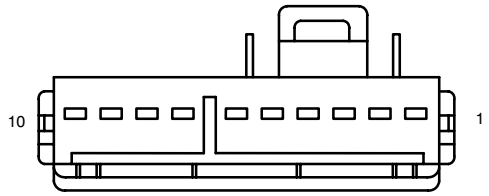

F10024

Pin	Circuit	Circuit function
1	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
2	584 (YE)	Voltage supplied in Start and Run (overload protected)
3	904 (LG/RD)	Generator/Battery indicator, control
4	608 (BK/YE)	Air bag indicator, control
5	977 (VT/WH)	Brake indicator, control
6	603 (DG)	Anti–lock brake indicator, control
7	1001 (WH/YE)	Voltage supplied at all times (overload protected)
8	398 (BK/YE)	Ground
9	–	not used
10	871 (YE)	Safety belt indicator, control

C240 (GY)

14401

Fog lamp switch

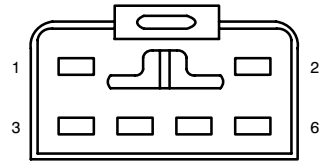

F06088

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	477 (LB/BK)	Fog lamp relay, output, to, fog lamps
4	57 (BK)	Ground
5	19 (LB/RD)	Power, Hot with Headlamps on
6	478 (TN/OG)	Fog lamp switch, to front fog lamp