INTRODUCTION

Component testing procedures are provided to determine whether or not a component operates properly.

Testing information for each component includes a schematic with component terminal locations and step-by-step test procedures. Component terminals are identified by:

1. the circuit number of the wires that connect to that terminal,
2. the wire insulation color, and
3. letters or numbers that may be marked on the component.

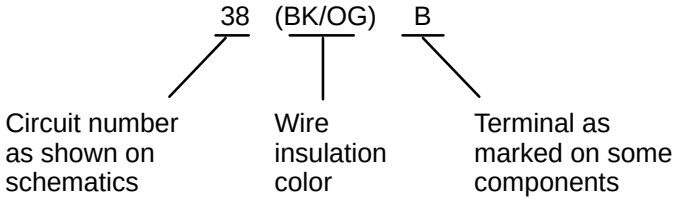

The component connector MUST BE REMOVED before testing. To test a single circuit within the component, select that circuit under the column TO TEST. If you wish to test the complete component, perform all tests.

Connect the tester to the terminals shown in the second column and operate the component as shown in the third column.

COMPONENT TESTING PROCEDURE

TO TEST	Connect Self-Powered Test Light or Ohmmeter to Terminals	Move Switch to These Positions	A Good Switch Will Indicate
Headlamp Circuit	B1 and H	OFF PARK HEAD	Open Circuit Open Circuit Closed Circuit
Park Lamp Circuit	B2 and R	OFF PARK HEAD	Open Circuit Closed Circuit Closed Circuit
Interior Lamp Circuit	D1 and D2	Thumbwheel rotated full left (in Detent) Thumbwheel rotated right (Any Amount Out of Detent)	Closed Circuit Open Circuit
Panel Lamp Dimmer Circuit	R and I	Thumbwheel rotated left from full right position	Ohmmeter will show smoothly increasing resistance

SCHEMATIC

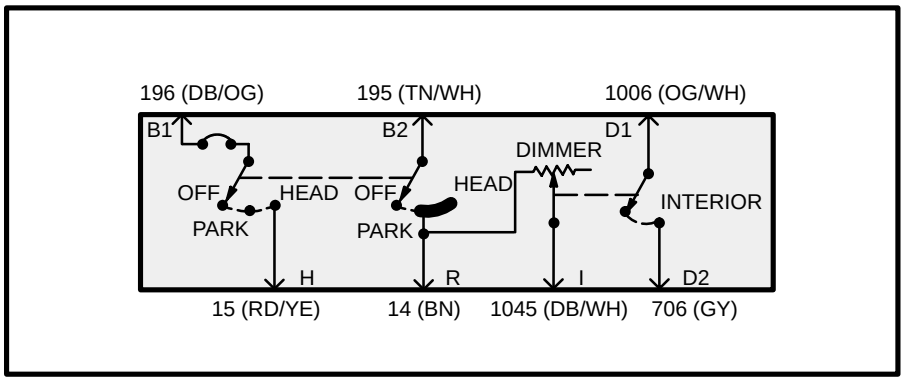
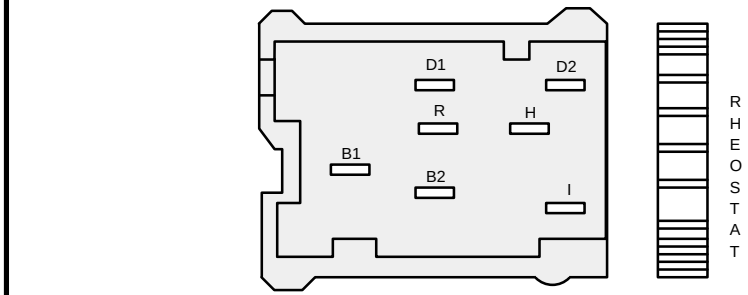
TERMINALS