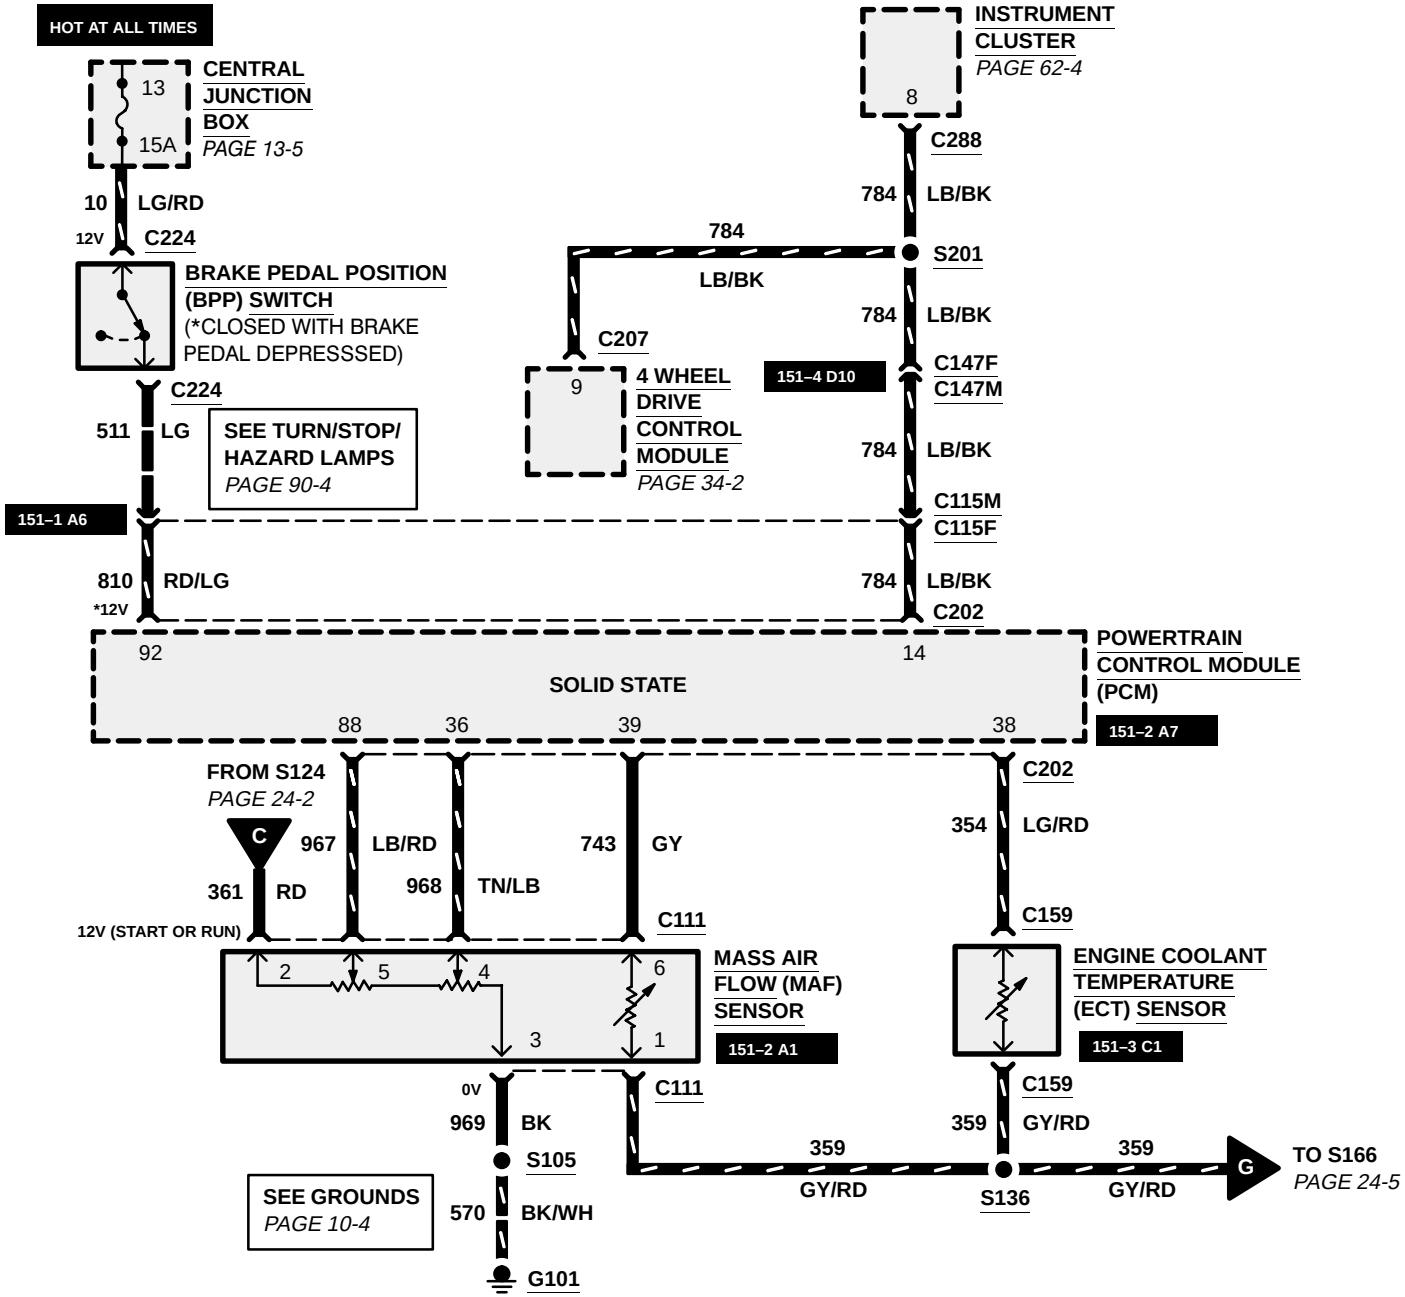
HOT AT ALL TIMES
CENTRAL JUNCTION BOX
PAGE 13-5
13
15A
10 LG/RD
12V
C224
BRAKE PEDAL POSITION (BPP) SWITCH
(*CLOSED WITH BRAKE PEDAL DEPRESSSED)
C224
511 LG
SEE TURN/STOP/ HAZARD LAMPS
PAGE 90-4
151–1 A6
810 RD/LG
*12V
INSTRUMENT CLUSTER
PAGE 62-4
8
C288
784 LB/BK
784
S201
LB/BK
784 LB/BK
C207
9
4 WHEEL DRIVE CONTROL MODULE
PAGE 34-2
151–4 D10
C147F
C147M
784 LB/BK
C115M
C115F
784 LB/BK
C202
92
14
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–2 A7
88
36
39
38
FROM S124
PAGE 24-2
C
967 LB/RD
361 RD
12V (START OR RUN)
968 TN/LB
743 GY
C111
C202
354 LG/RD
C159
2
5
4
6
3
1
MASS AIR FLOW (MAF) SENSOR
151–2 A1
ENGINE COOLANT TEMPERATURE (ECT) SENSOR
151–3 C1
0V
969 BK
S105
C111
C159
359 GY/RD
359
GY/RD
359
GY/RD
G
TO S166
PAGE 24-5
S136
SEE GROUNDS
PAGE 10-4
570 BK/WH
G101