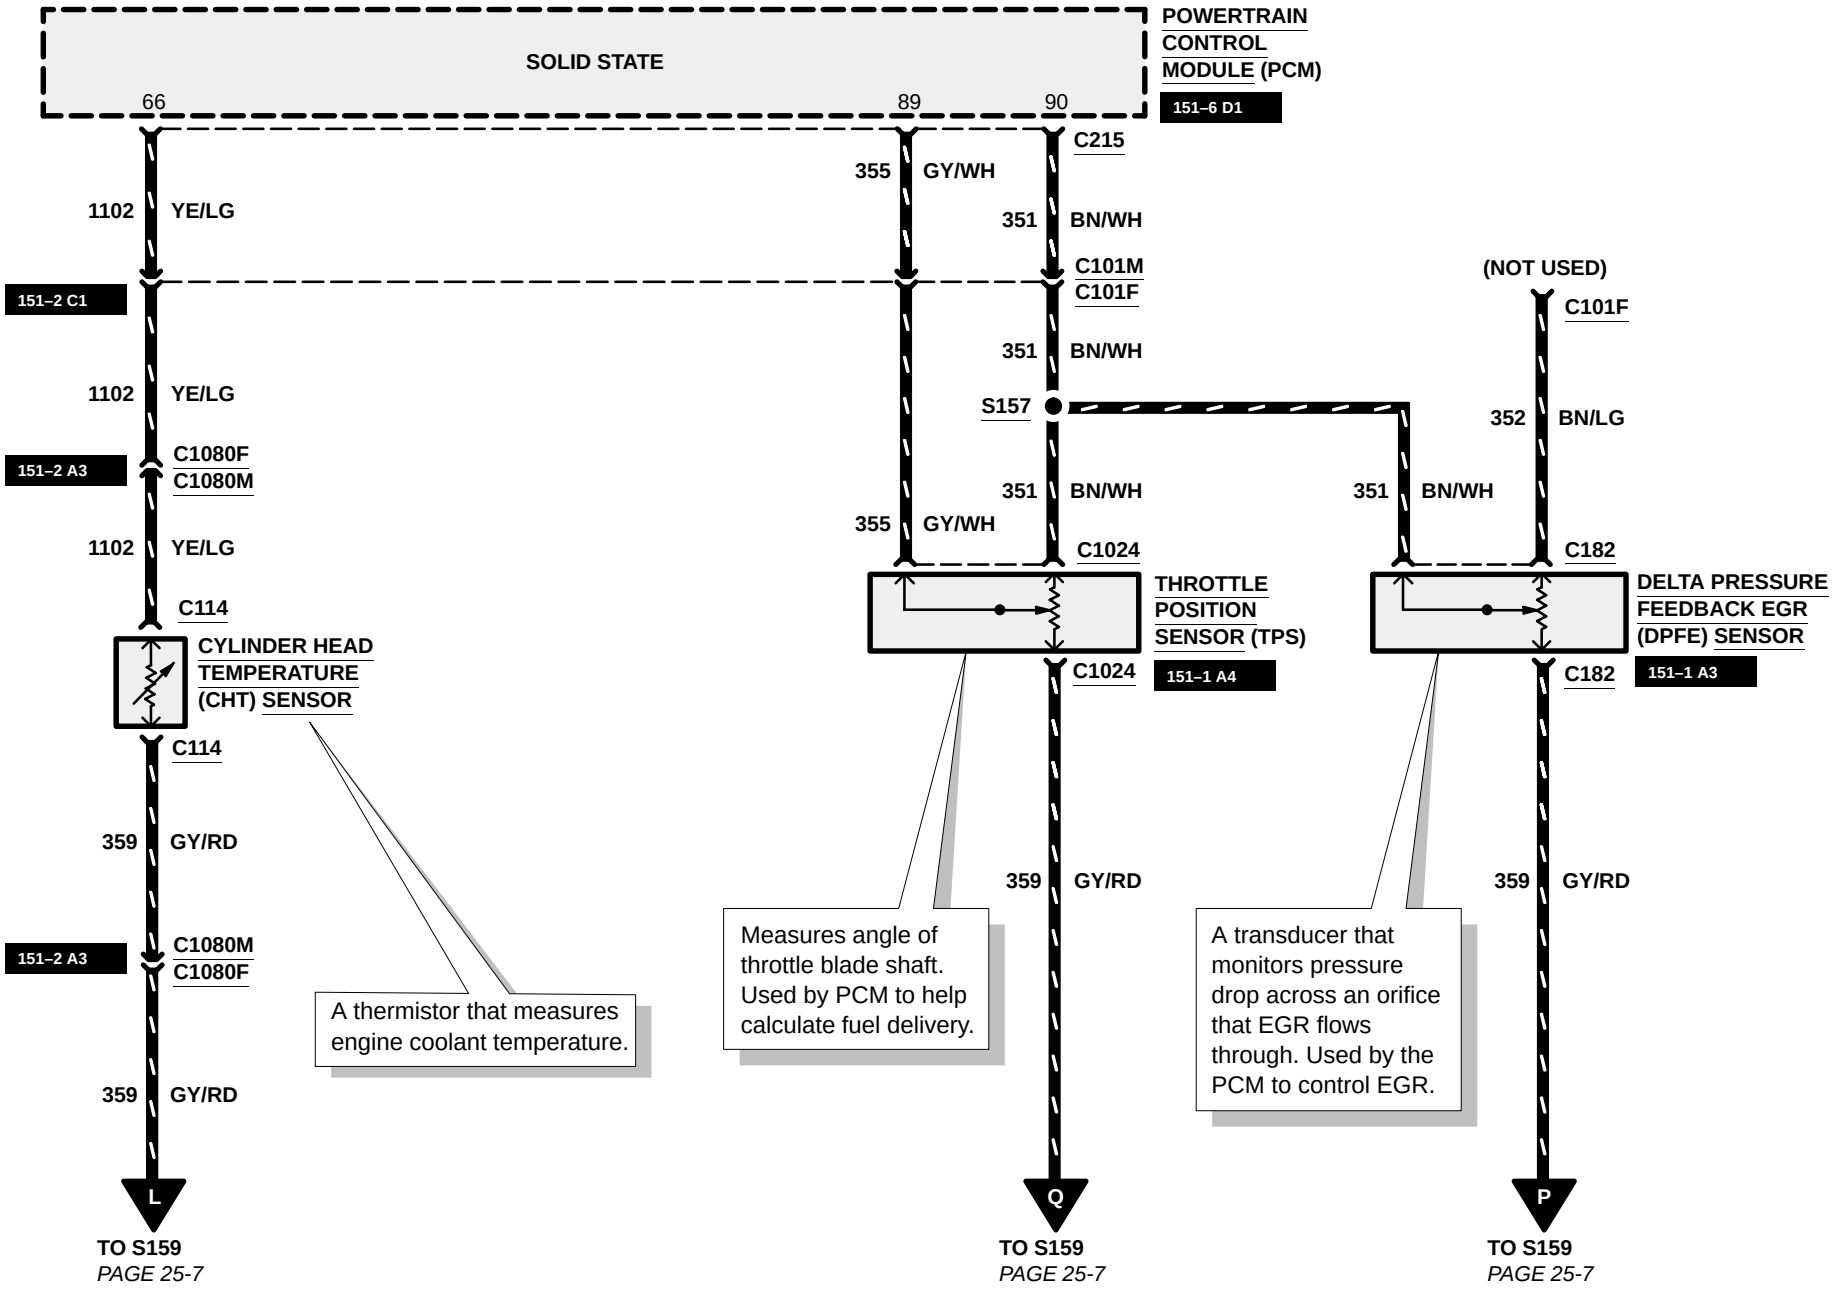
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–6 D1
66
89
90
C215
355 GY/WH
351 BN/WH
1102 YE/LG
C101M
C101F
151–2 C1
351 BN/WH
1102 YE/LG
S157
(NOT USED)
C101F
352 BN/LG
C1080F
C1080M
151–2 A3
351 BN/WH
351 BN/WH
1102 YE/LG
355 GY/WH
C1024
C182
C114
THROTTLE POSITION SENSOR (TPS)
DELTA PRESSURE FEEDBACK EGR (DPFE) SENSOR
151–1 A4
151–1 A3
CYLINDER HEAD TEMPERATURE (CHT) SENSOR
C114
C1024
C182
359 GY/RD
359 GY/RD
359 GY/RD
C1080M
C1080F
151–2 A3
A thermistor that measures engine coolant temperature.
Measures angle of throttle blade shaft. Used by PCM to help calculate fuel delivery.
A transducer that monitors pressure drop across an orifice that EGR flows through. Used by the PCM to control EGR.
L
Q
P
TO S159
PAGE 25-7
TO S159
PAGE 25-7
TO S159
PAGE 25-7