Excursion

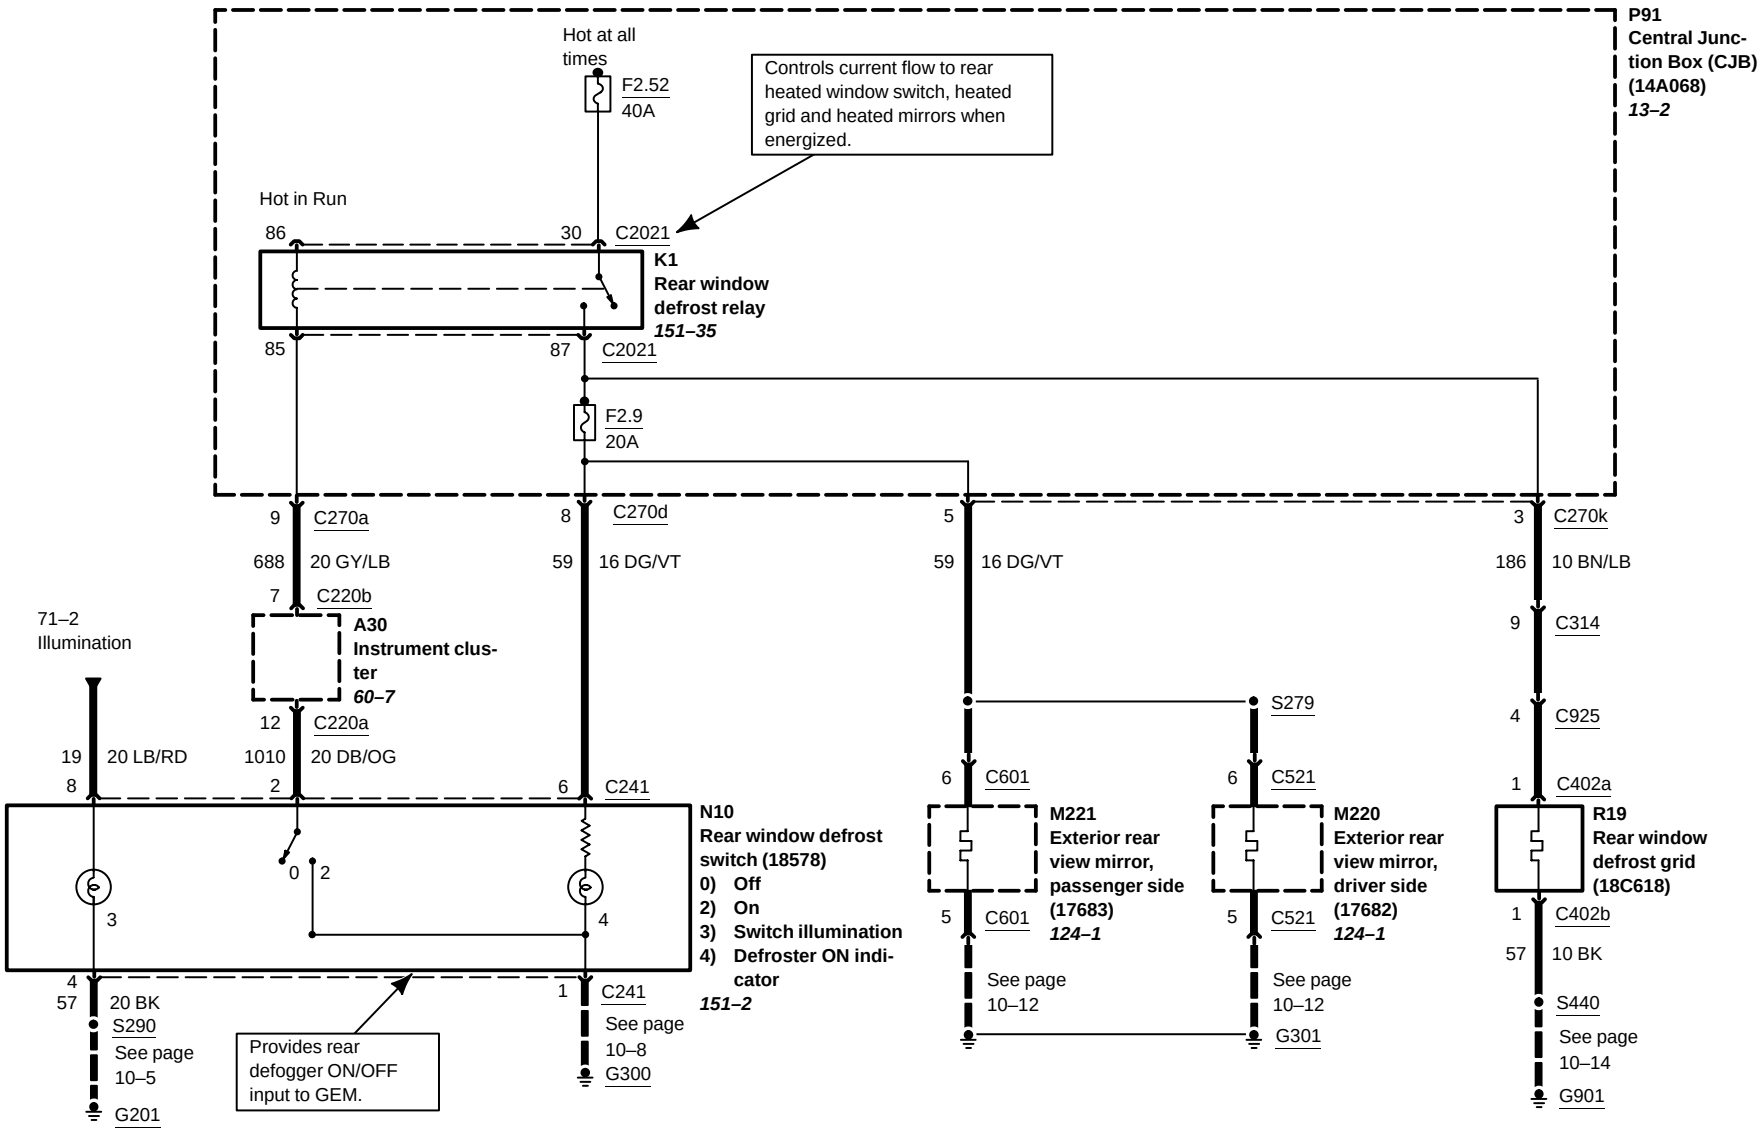
P91
Central Junction Box (CJB)
(14A068)
13–2
Hot at all times
F2.52
40A
Controls current flow to rear heated window switch, heated grid and heated mirrors when energized.
Hot in Run
86
30
C2021
K1
Rear window defrost relay
151–35
85
87
C2021
F2.9
20A
9
C270a
688
20 GY/LB
7
C220b
8
C270d
59
16 DG/VT
5
59
16 DG/VT
3
C270k
186
10 BN/LB
71–2
Illumination
A30
Instrument cluster
60–7
12
C220a
1010
20 DB/OG
19
20 LB/RD
8
2
6
C241
N10
Rear window defrost switch (18578)
0) Off
2) On
3) Switch illumination
4) Defroster ON indicator
151–2
0
2
3
4
S279
6
C601
6
C521
M221
Exterior rear view mirror, passenger side
(17683)
124–1
M220
Exterior rear view mirror, driver side
(17682)
124–1
5
C601
5
C521
See page 10–12
See page 10–12
G301
9
C314
4
C925
1
C402a
R19
Rear window defrost grid
(18C618)
1
C402b
57
10 BK
S440
See page 10–14
G901
4
57
20 BK
S290
See page 10–5
G201
Provides rear defogger ON/OFF input to GEM.
1
C241
See page 10–8
G300