C501b

14631

A215
Driver Door Module
(DDM)

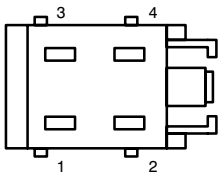

F04137

Pin	Circuit	Circuit Function
1	32-AJ26 (WH)	Switched between: Battery voltage, Ground or Open
2	33-AJ26 (YE)	Switched between: Battery voltage, Ground or Open
3	31-AJ80 (BK)	Ground
4	30-AJ80 (RD)	Voltage supplied at all times (not overload protected)

C501c

14631

A215
Driver Door Module
(DDM)

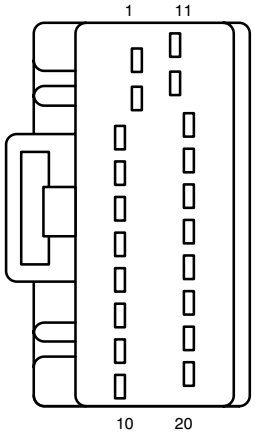

F20017

Pin	Circuit	Circuit Function
1	32-AD7 (WH/RD)	Switched between: Battery voltage, Ground or Open
2	33-AD7 (YE/RD)	Switched between: Battery voltage, Ground or Open
3	34-AD8 (BU/WH)	Switched between: Battery voltage, Ground or Open
4	35-AD8 (VT)	Switched between: Battery voltage, Ground or Open
5	7-AD18 (YE/BK)	Voltage D.C. supplied at all times (sensor)
6	–	not used
7	–	not used
8	33-AA10 (YE/BK)	Switched between: Battery voltage, Ground or Open
9	32-AA11 (WH/VT)	Switched between: Battery voltage, Ground or Open
10	–	not used
11	–	not used
12	–	not used
13	–	not used
14	8-AD18 (WH/BK)	Ground, Switched
15	10-AD18 (GY/BK)	Signal 2 (Y–direction, reverse, downward)
16	31S-AA78 (BK/BU)	Ground, Switched
17	31S-AA79 (BK/WH)	Ground, Switched
18	–	not used
19	9-AD18 (BN/YE)	Sensor signal return (reference/ground)
20	–	not used