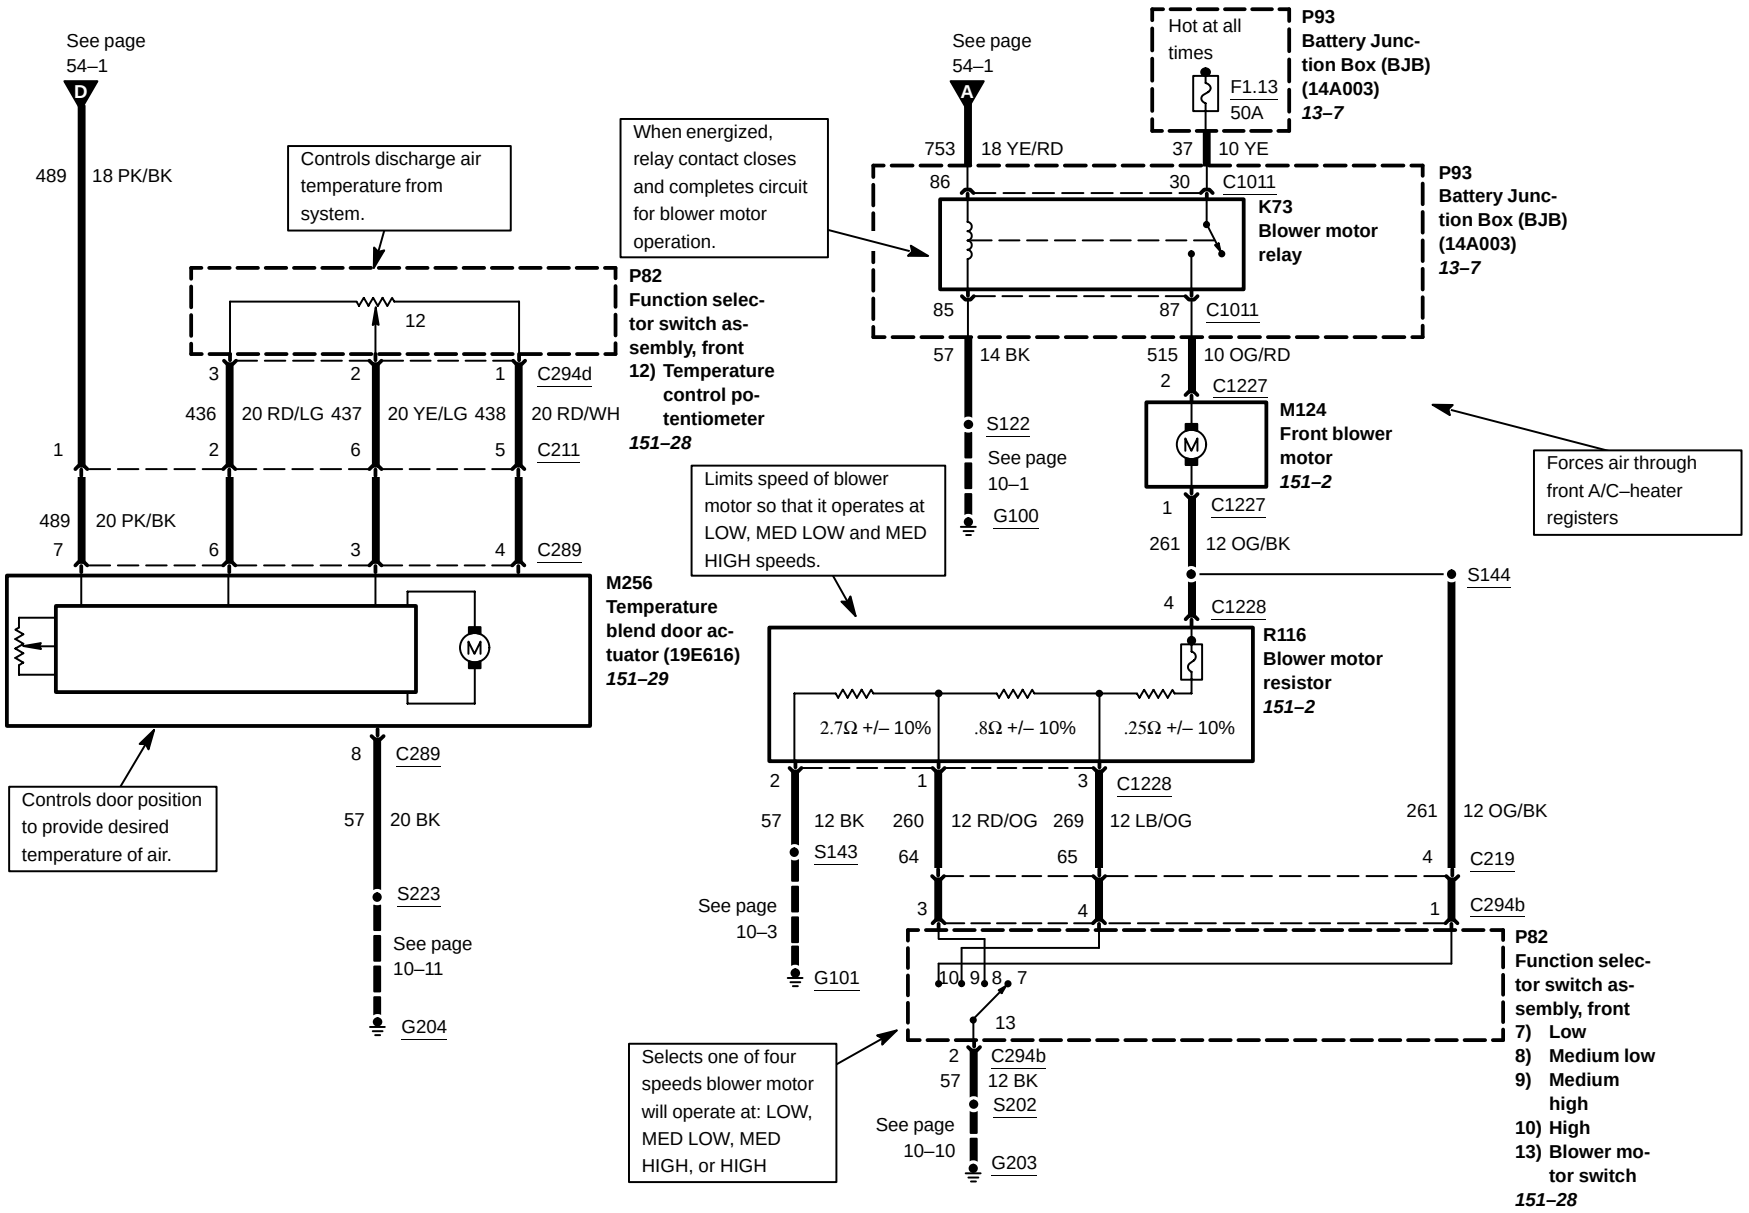
See page 54–1
D
489 18 PK/BK
Controls discharge air temperature from system.
P82 Function selector switch assembly, front
12) Temperature control potentiometer
151–28
12
3 2 1 C294d
436 20 RD/LG 437 20 YE/LG 438 20 RD/WH
1 2 6 5 C211
489 20 PK/BK
7 6 3 4 C289
M256 Temperature blend door actuator (19E616)
151–29
M
Controls door position to provide desired temperature of air.
8 C289
57 20 BK
S223
See page 10–11
G204
See page 54–1
A
When energized, relay contact closes and completes circuit for blower motor operation.
753 18 YE/RD
Hot at all times
F1.13 50A
37 10 YE
P93 Battery Junction Box (BJB) (14A003)
13–7
86 30 C1011
K73 Blower motor relay
85 87 C1011
P93 Battery Junction Box (BJB) (14A003)
13–7
57 14 BK
S122
See page 10–1
G100
515 10 OG/RD
2 C1227
M124 Front blower motor
151–2
Forces air through front A/C–heater registers
Limits speed of blower motor so that it operates at LOW, MED LOW and MED HIGH speeds.
1 C1227
261 12 OG/BK
S144
4 C1228
R116 Blower motor resistor
151–2
2.7Ω +/– 10%
.8Ω +/– 10%
.25Ω +/– 10%
2 1 3 C1228
57 12 BK 260 12 RD/OG 269 12 LB/OG
261 12 OG/BK
S143
64 65
4 C219
See page 10–3
3 4 1 C294b
G101
P82 Function selector switch assembly, front
7) Low
8) Medium low
9) Medium high
10) High
13) Blower motor switch
151–28
10 9 8 7
13
Selects one of four speeds blower motor will operate at: LOW, MED LOW, MED HIGH, or HIGH
2 C294b
57 12 BK
S202
See page 10–10
G203