Early build

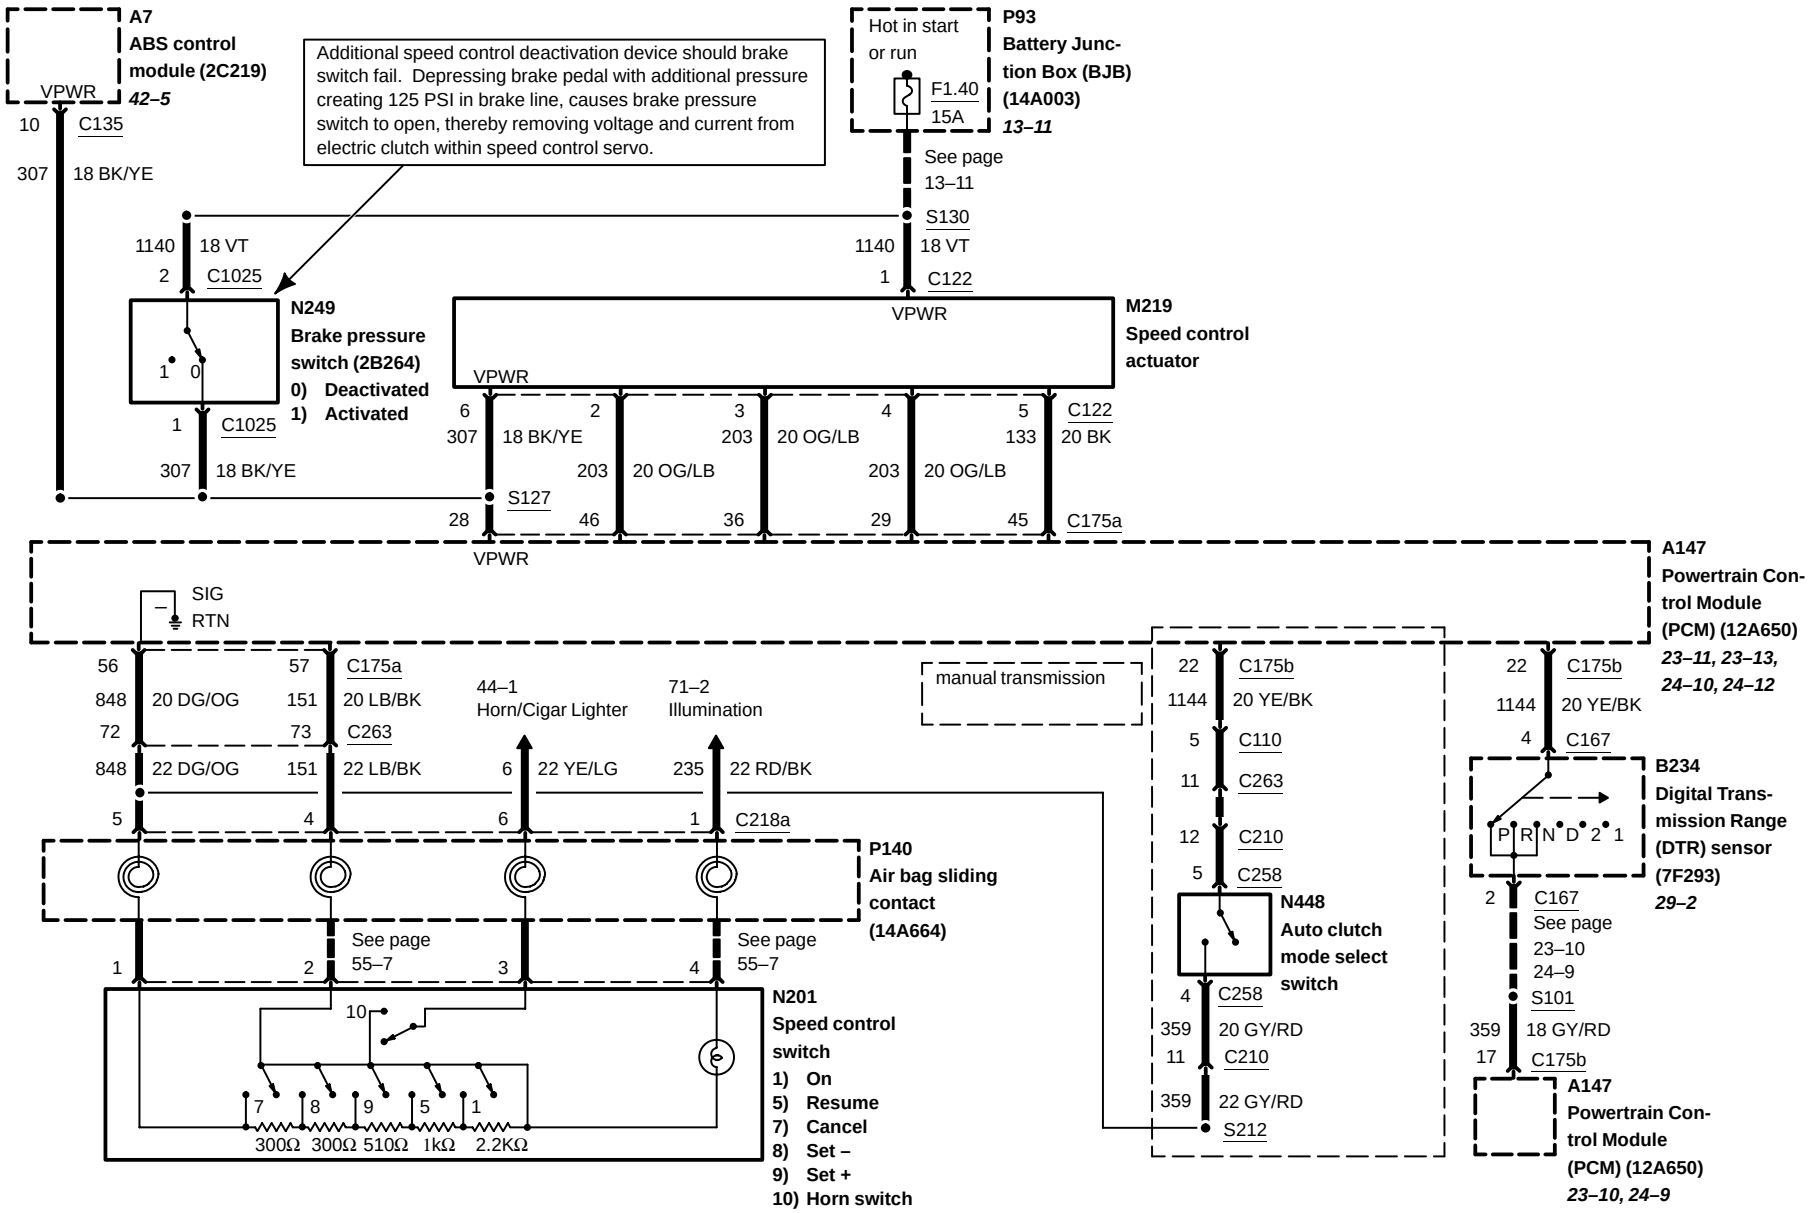
A7
ABS control module (2C219)
42–5
VPWR
10 C135
307 18 BK/YE
Additional speed control deactivation device should brake switch fail. Depressing brake pedal with additional pressure creating 125 PSI in brake line, causes brake pressure switch to open, thereby removing voltage and current from electric clutch within speed control servo.
Hot in start or run
F1.40
15A
P93
Battery Junction Box (BJB) (14A003)
13–11
See page 13–11
S130
1140 18 VT
1140 18 VT
2 C1025
1 C122
VPWR
N249
Brake pressure switch (2B264)
0) Deactivated
1) Activated
1 0
M219
Speed control actuator
VPWR
6 307 18 BK/YE
2 203 20 OG/LB
3 203 20 OG/LB
4 203 20 OG/LB
5 133 20 BK
C122
1 C1025
307 18 BK/YE
S127
28 46 36 29 45
C175a
VPWR
A147
Powertrain Control Module (PCM) (12A650)
23–11, 23–13, 24–10, 24–12
SIG RTN
56 848 72 848 20 DG/OG 22 DG/OG
57 151 73 151 C175a C263 20 LB/BK 22 LB/BK
44–1
Horn/Cigar Lighter
6 22 YE/LG
71–2
Illumination
235 22 RD/BK
5 4 6 1 C218a
manual transmission
22 1144 5 11 12 5 C175b 20 YE/BK C110 C263 C210 C258
22 1144 4 C175b 20 YE/BK C167
B234
Digital Transmission Range (DTR) sensor (7F293)
29–2
P R N D 2 1
2 C167
See page 23–10 24–9
S101
359 18 GY/RD
17 C175b
A147
Powertrain Control Module (PCM) (12A650)
23–10, 24–9
P140
Air bag sliding contact (14A664)
1 2 3 4
See page 55–7
See page 55–7
N448
Auto clutch mode select switch
4 C258
359 20 GY/RD
11 C210
359 22 GY/RD
S212
N201
Speed control switch
1) On
5) Resume
7) Cancel
8) Set –
9) Set +
10) Horn switch
10
7 8 9 5 1
300Ω 300Ω 510Ω 1kΩ 2.2KΩ