C359

14A699

Heated seat module, driver side front

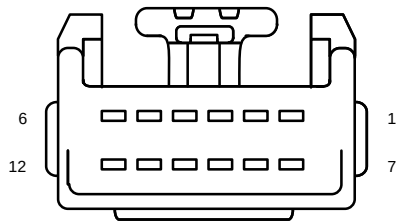

F12075

Pin	Circuit	Circuit Function
1	57 (BK)	Ground
2	–	not used
3	1061 (BN/LB)	Seat cushion heater, driver side, Sensor, return
4	1060 (BK/LB)	Seat cushion heater, driver side, Sensor
5	295 (LB/PK)	Voltage in Run (overload protected)
6	1064 (YE/LB)	Seat cushion heater, driver side, heater, feed
7	1067 (VT/LB)	Seat back heater, driver side, heater, feed
8	1020 (DG/VT)	Seat heater switch, driver side, input
9	–	not used
10	461 (OG)	switch indicator control
11	–	not used
12	1153 (RD/BK)	Voltage supplied at all times (overload protected)

C360

14A699

Seat adjust switch, driver side front (14A701)

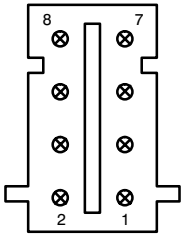

*with memory

F08245

Pin	Circuit	Circuit Function
1	*1464 (YE)	Front up/down circuit
1	990 (YE/LB)	Forward/Rearward circuit +/–
2	*1468 (GY/LB)	Rear up/down circuit
2	983 (RD/LG)	Rear up/down circuit +/–
3	*1467 (GY/YE)	Rear up/down circuit
3	932 (YE/LG)	Rear up/down circuit +/–
4	*956 (OG/LG)	Voltage supplied at all times (overload protected)
4	566 (DG)	Voltage supplied at all times (overload protected)
5	*1463 (RD/YE)	Front up/down circuit
5	979 (RD/LB)	Forward/Rearward circuit +/–
6	*1466 (GY/OG)	Seat Forward
6	981 (RD/WH)	Front up/down circuit +/–
7	*1465 (GY/WH)	Seat rearward
7	980 (YE/WH)	Front up/down circuit +/–
8	*676 (PK/OG)	Front up/down circuit
8	57 (BK)	Ground