C204

14401

N409
Exterior rear view mirror switch

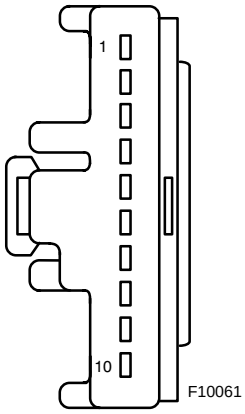

Pin	Circuit	Circuit Function
1	32-AD30 (WH/BK)	Switched between: Battery voltage, Ground or Open
2	32-AD32 (WH/RD)	Switched between: Battery voltage, Ground or Open
3	31-AD12 (BK)	Ground
4	33-AD12 (YE)	Switched between: Battery voltage, Ground or Open
5	31-LH50 (BK)	Ground
6	64S-LH50 (BU/YE)	Variable D.C. voltage (not overload protected), Switched
7	29-AD12 (OG/YE)	Voltage supplied at all times (overload protected)
8	34-AD31 (BU/WH)	Switched between: Battery voltage, Ground or Open
9	34-AD29 (BU/OG)	Switched between: Battery voltage, Ground or Open
10	–	not used

C205

14401

N113
Main light switch

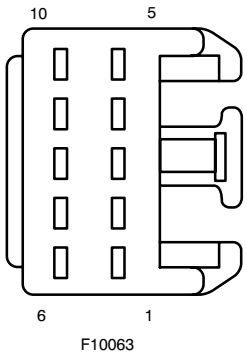

Pin	Circuit	Circuit Function
1	8-LE21 (WH/GN)	Sensor signal
2	–	not used
3	–	not used
4	31-LH26 (BK)	Ground
5	64S-LH26 (BU/BK)	Variable D.C. voltage (not overload protected), Switched
6	7-LD13 (YE/BK)	Voltage D.C. supplied at all times (sensor)
7	9-LE29 (BN/GN)	Sensor signal return (reference/ground)
8	10-LE47 (GY/OG)	Signal 2 (Y–direction, reverse, downward)
9	8-LD10 (WH/BK)	Sensor signal
10	7-LD7 (YE/RD)	Voltage D.C. supplied at all times (sensor)