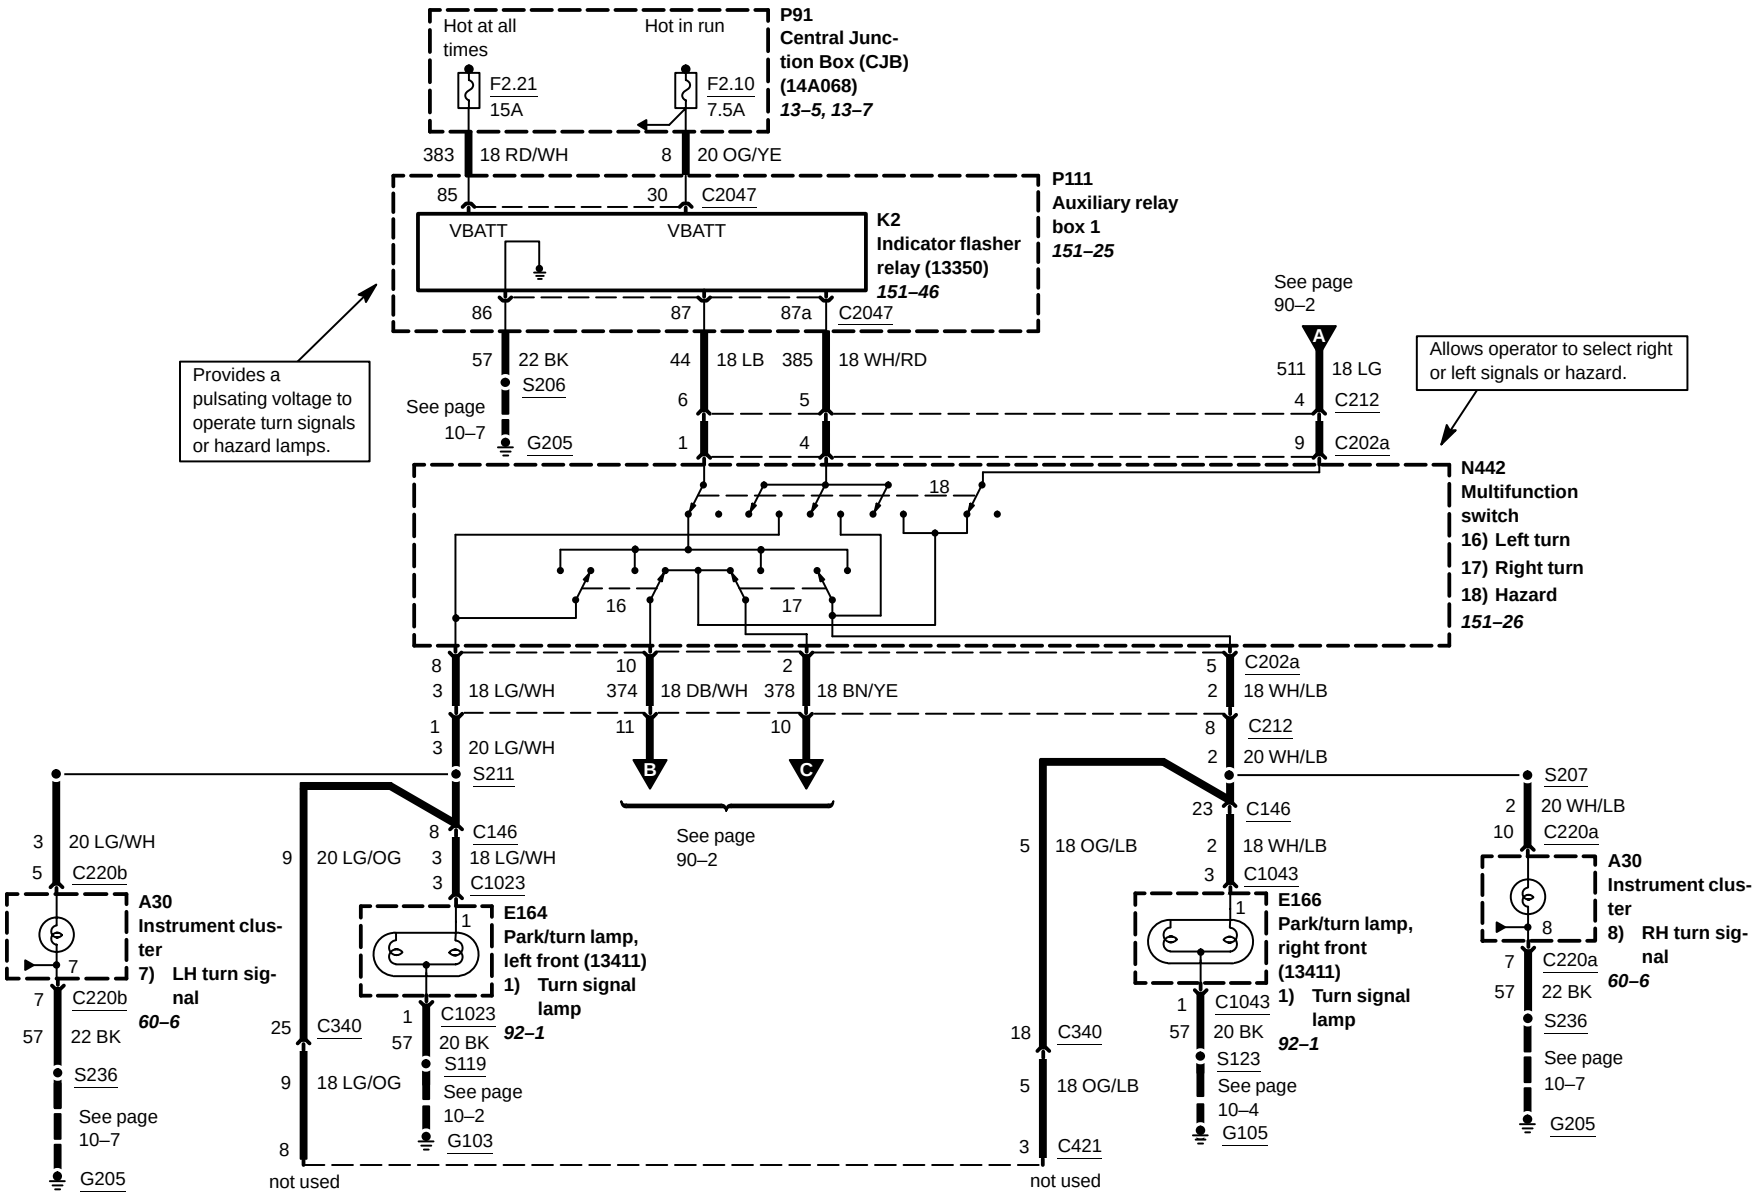
Hot at all times
Hot in run
F2.21
15A
F2.10
7.5A
P91
Central Junction Box (CJB)
(14A068)
13–5, 13–7
383
18 RD/WH
8
20 OG/YE
85
30
C2047
P111
Auxiliary relay box 1
151–25
VBATT
VBATT
K2
Indicator flasher relay (13350)
151–46
86
87
87a
C2047
Provides a pulsating voltage to operate turn signals or hazard lamps.
57
22 BK
S206
See page 10–7
G205
44
18 LB
385
18 WH/RD
6
5
1
4
See page 90–2
A
511
18 LG
4
C212
9
C202a
Allows operator to select right or left signals or hazard.
N442
Multifunction switch
16) Left turn
17) Right turn
18) Hazard
151–26
18
16
17
8
3
18 LG/WH
10
374
18 DB/WH
2
378
18 BN/YE
1
3
20 LG/WH
S211
11
10
B
C
See page 90–2
5
C202a
2
18 WH/LB
8
C212
2
20 WH/LB
S207
2
20 WH/LB
10
C220a
3
20 LG/WH
5
C220b
A30
Instrument cluster
7) LH turn signal
60–6
7
C220b
57
22 BK
S236
See page 10–7
G205
9
20 LG/OG
8
C146
3
18 LG/WH
3
C1023
E164
Park/turn lamp, left front (13411)
1) Turn signal lamp
92–1
1
C1023
57
20 BK
S119
See page 10–2
G103
25
C340
9
18 LG/OG
8
not used
5
18 OG/LB
23
C146
2
18 WH/LB
3
C1043
E166
Park/turn lamp, right front (13411)
1) Turn signal lamp
92–1
1
C1043
57
20 BK
S123
See page 10–4
G105
18
C340
5
18 OG/LB
3
C421
not used
A30
Instrument cluster
8) RH turn signal
60–6
8
7
C220a
57
22 BK
S236
See page 10–7
G205