C201g

14A005

A213
Front Electronic
Module (FEM)
(13C788)

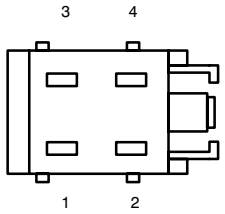

F04137

Pin	Circuit	Circuit Function
1	33-AJ26 (YE)	Switched between: Battery voltage, Ground or Open
2	32-AJ26 (WH)	Switched between: Battery voltage, Ground or Open
3	30-AJ80 (RD/OG)	Voltage supplied at all times (not overload protected)
4	31-AJ80 (BK/OG)	Ground

C202

14402

N442
Multifunction switch



F12006

C203

14402

N201
Speed control
switch

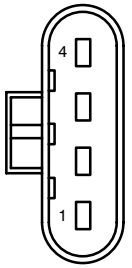

F12077

C204

14401

N409
Exterior rear view
mirror switch
(17B676)

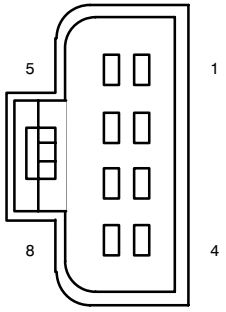

F08177

Pin	Circuit	Circuit Function
1	32-AD30 (WH/BK)	Switched between: Battery voltage, Ground or Open
2	32-AD32 (WH/RD)	Switched between: Battery voltage, Ground or Open
3	33-AD12 (YE)	Switched between: Battery voltage, Ground or Open
4	31-AD12 (BK/YE)	Ground
5	34-AD31 (BU/WH)	Switched between: Battery voltage, Ground or Open
6	34-AD29 (BU/OG)	Switched between: Battery voltage, Ground or Open
7	–	not used
8	29-AD12 (OG/YE)	Voltage supplied at all times (overload protected)