C920

15C670

Roof opening panel motor assembly (15790)

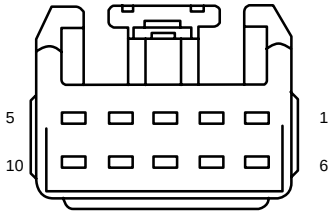

F10139

Pin	Circuit	Circuit function
1	30-AG12 (RD/GN)	Voltage supplied at all times (overload protected)
2	–	not used
3	10-AJ43B (GY/VT)	Data link, bus negative
4	32-AG12 (WH/GN)	Roof opening panel switch (15B691) - Tilt
5	–	not used
6	8-AJ43B (WH/BU)	Data link, bus positive
7	9-AG7 (BN/RD)	Roof opening panel switch (15B691) - common
8	33-AG10 (YE/BU)	Roof opening panel switch (15B691) - Tilt, Close
9	32-AG10 (WH/BU)	Roof opening panel switch (15B691) - Slide, Up
10	31-AG12 (BK/GN)	Ground

C1003

14290

COPS & Heated Oxygen Sensor (HO2S) relay

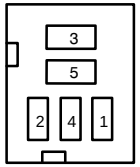

F05064

Pin	Circuit	Circuit function
1	15-RH9B (GN/BU)	Voltage supplied in Start and Run (overload protected)
2	31-RH9A (BK)	Ground
3	30-RH9A (RD)	Voltage supplied at all times (overload protected)
4	–	not used
5	15S-DB2 (GN/BU)	Variable DC voltage (overload protected), switched power, output