C602b

14A005

N240
Door ajar switch, passenger side front (14018)

F01067

Pin	Circuit	Circuit function
1	57 (BK)	Ground

C602c

14A005

N240
Door ajar switch, passenger side front (14018)

F01006

Pin	Circuit	Circuit function
1	465 (WH/LB)	Door ajar indicator, Instrument cluster

C603

14A005

M226
Door lock actuator, passenger side (218A42)

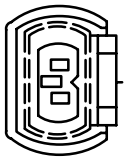

F02116

Pin	Circuit	Circuit function
1	118 (PK/OG)	Door unlock, output
2	117 (PK/BK)	Door lock, output

C608

14A005

M79
Power window motor, passenger side front (23394)



F02387

Pin	Circuit	Circuit function
1	334 (RD/YE)	Window motor, feed, Down
2	333 (YE/RD)	Window motor, feed, Up

C612

14A005

Y18
Speaker, right front (18808)

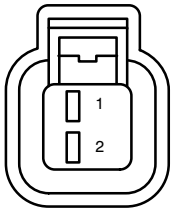

F02069

Pin	Circuit	Circuit function
1	805 (WH/LG)	Speaker, right front (18808) +
2	811 (DG/OG)	Speaker, right front (18808) –

C622

14A005

M260
Exterior rear view mirror, right

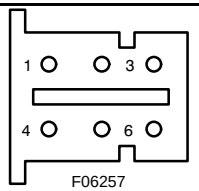

F06257

Pin	Circuit	Circuit function
1	544 (VT)	Up/Down mirror movement
2	545 (WH)	J515
3	543 (DG)	!!! No Data Found !!! feed Right/Left mirror movement
4	57 (BK)	Ground
5	–	not used
6	59 (DG/VT)	Fused rear window defrost relay, switched power