C340 (GY)

14A488

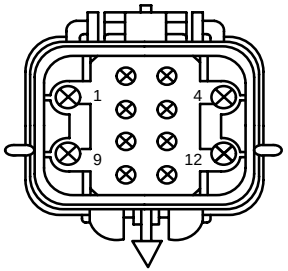

F12207

(1)	1205 (BK)	(7)	705 (LG/OG)
(2)	575 (YE/BK)	(8)	–
(3)	1003 (GY/YE)	(9)	181 (BN/OG)
(4)	–	(10)	1205 (BK)
(5)	235 (RD/BK)	(11)	53 (BK/LB)
(6)	–	(12)	–

14335

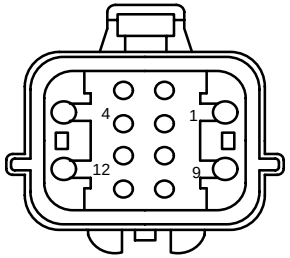

F12209

(1)	1205 (BK)	(7)	705 (LG/OG)
(2)	575 (YE/BK)	(8)	–
(3)	1003 (GY/YE)	(9)	181 (BN/OG)
(4)	–	(10)	1205 (BK)
(5)	235 (RD/BK)	(11)	53 (BK/LB)
(6)	–	(12)	–

C341e (GY)

14C719

Driver seat module (14C708)

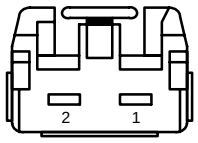

F02032

Pin	Circuit	Circuit function
1	566 (DG)	Voltage supplied at all times (overload protected)
2	1205 (BK)	Ground

C341f (WH)

14C719

Driver seat module (14C708)

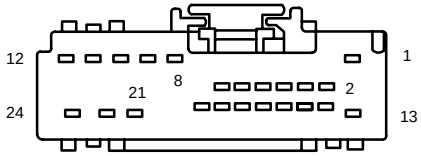

F24021

Pin	Circuit	Circuit function
1	1469 (RD/LB)	Front height circuit, to Seat motor
2	–	not used
3	1467 (GY/YE)	Rear height circuit, from Power seat switch
4	1468 (GY/LB)	Rear height circuit, from Power seat switch
5	442 (LG/OG)	Driver memory seat horizontal sensor, signal
6	443 (LG/RD)	Driver memory seat front height sensor, signal
7	1463 (RD/YE)	Front height circuit, from Power seat switch
8	–	not used
9	1474 (RD/LG)	Rear height circuit, to Seat motor
10	1489 (LB/BK)	Adjustable pedal motor (2C429), Forward/Rearward circuit
11	1471 (RD/WH)	Forward/Rearward circuit, to Seat motor
12	1490 (LB/OG)	Adjustable pedal motor (2C429), Forward/Rearward circuit
13	447 (OG/RD)	position sense –
14	1466 (GY/OG)	Forward/Rearward circuit, from Power seat switch
15	1465 (GY/WH)	Forward/Rearward circuit, from Power seat switch
16	1464 (YE)	Front height circuit, from Power seat switch
17	444 (LG/BK)	Driver memory seat rear height sensor, signal
18	–	not used
19	446 (OG/WH)	position sense +
20	–	not used
21	–	not used
22	1472 (YE/WH)	Forward/Rearward circuit, to Seat motor
23	1473 (YE/LG)	Rear height circuit, to Seat motor
24	1470 (YE/LB)	Front height circuit, to Seat motor