C501d

14B121

A215
Driver Door Module
(DDM)

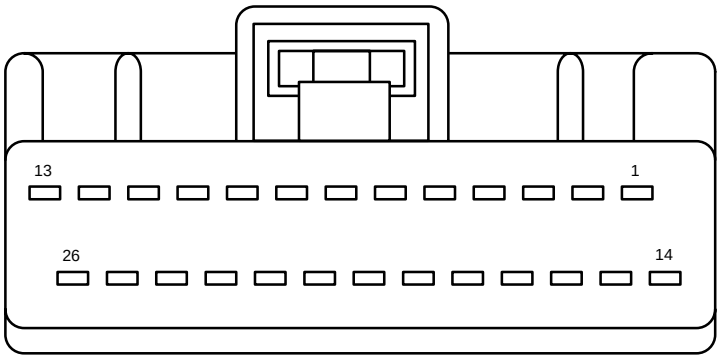

F26018

Pin	Circuit	Circuit Function
1	–	not used
2	7S-AJ47 (YE/BK)	Voltage D.C. supplied at all times (sensor), Switched
3	7S-AJ48 (YE/VT)	Voltage D.C. supplied at all times (sensor), Switched
4	7S-AJ51 (YE/RD)	Voltage D.C. supplied at all times (sensor), Switched
5	7S-AJ52 (YE)	Voltage D.C. supplied at all times (sensor), Switched
6	–	not used
7	7S-AH27 (YE)	Voltage D.C. supplied at all times (sensor), Switched
8	7S-AJ49 (YE/GN)	Voltage D.C. supplied at all times (sensor), Switched
9	7S-AJ50 (YE/BU)	Voltage D.C. supplied at all times (sensor), Switched
10	8-AH31 (WH/RD)	Sensor signal
11	8-AH32 (WH/BU)	Sensor signal
12	7-AD1 (YE)	Voltage D.C. supplied at all times (sensor)
13	–	not used
14	34-AD29 (BU/OG)	Switched between: Battery voltage, Ground or Open

Pin	Circuit	Circuit Function
15	32-AD30 (WH/BK)	Switched between: Battery voltage, Ground or Open
16	34-AD31 (BU/WH)	Switched between: Battery voltage, Ground or Open
17	32-AD32 (WH/RD)	Switched between: Battery voltage, Ground or Open
18	33-AD12 (YE)	Switched between: Battery voltage, Ground or Open
19	7S-AJ41 (YE/BK)	Voltage D.C. supplied at all times (sensor), Switched
20	7S-AJ40 (YE/GN)	Voltage D.C. supplied at all times (sensor), Switched
21	7S-AJ16 (YE/BK)	Voltage D.C. supplied at all times (sensor), Switched
22	7S-AJ20 (YE/BU)	Voltage D.C. supplied at all times (sensor), Switched
23	8-AA10 (WH/BK)	Sensor signal
24	8-AA11 (WH/VT)	Sensor signal
25	8-AH27 (WH)	Sensor signal
26	–	not used