C604

14A005

N105
Window adjust switch, passenger side

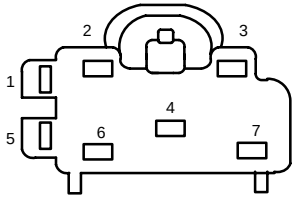

F07081

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	313 (WH/YE)	Window switch, feed, right front, Up
3	333 (YE/RD)	Window motor, feed, Up
4	193 (YE/LG)	Window safety relay, switched output
5	19 (LB/RD)	Voltage supplied at all times (overload protected)
6	334 (RD/YE)	Window motor, feed, Down
7	314 (TN/LB)	Window switch, feed, right front, Down

C605

14A005

N205
Door lock switch, passenger side (14028)

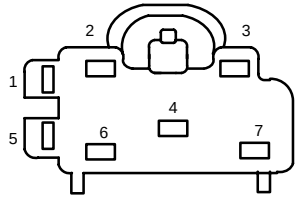

F07081

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	–	not used
3	120 (PK/LG)	Door unlock relay, control
4	57 (BK)	Ground
5	19 (LB/RD)	Voltage supplied at all times (overload protected)
6	119 (PK/YE)	Door lock relay, control
7	–	not used

C606

14A005

E178
Door entry lamp, right front (13776)



F02235

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	53 (BK/LB)	Interior lamp relay, switched power, output