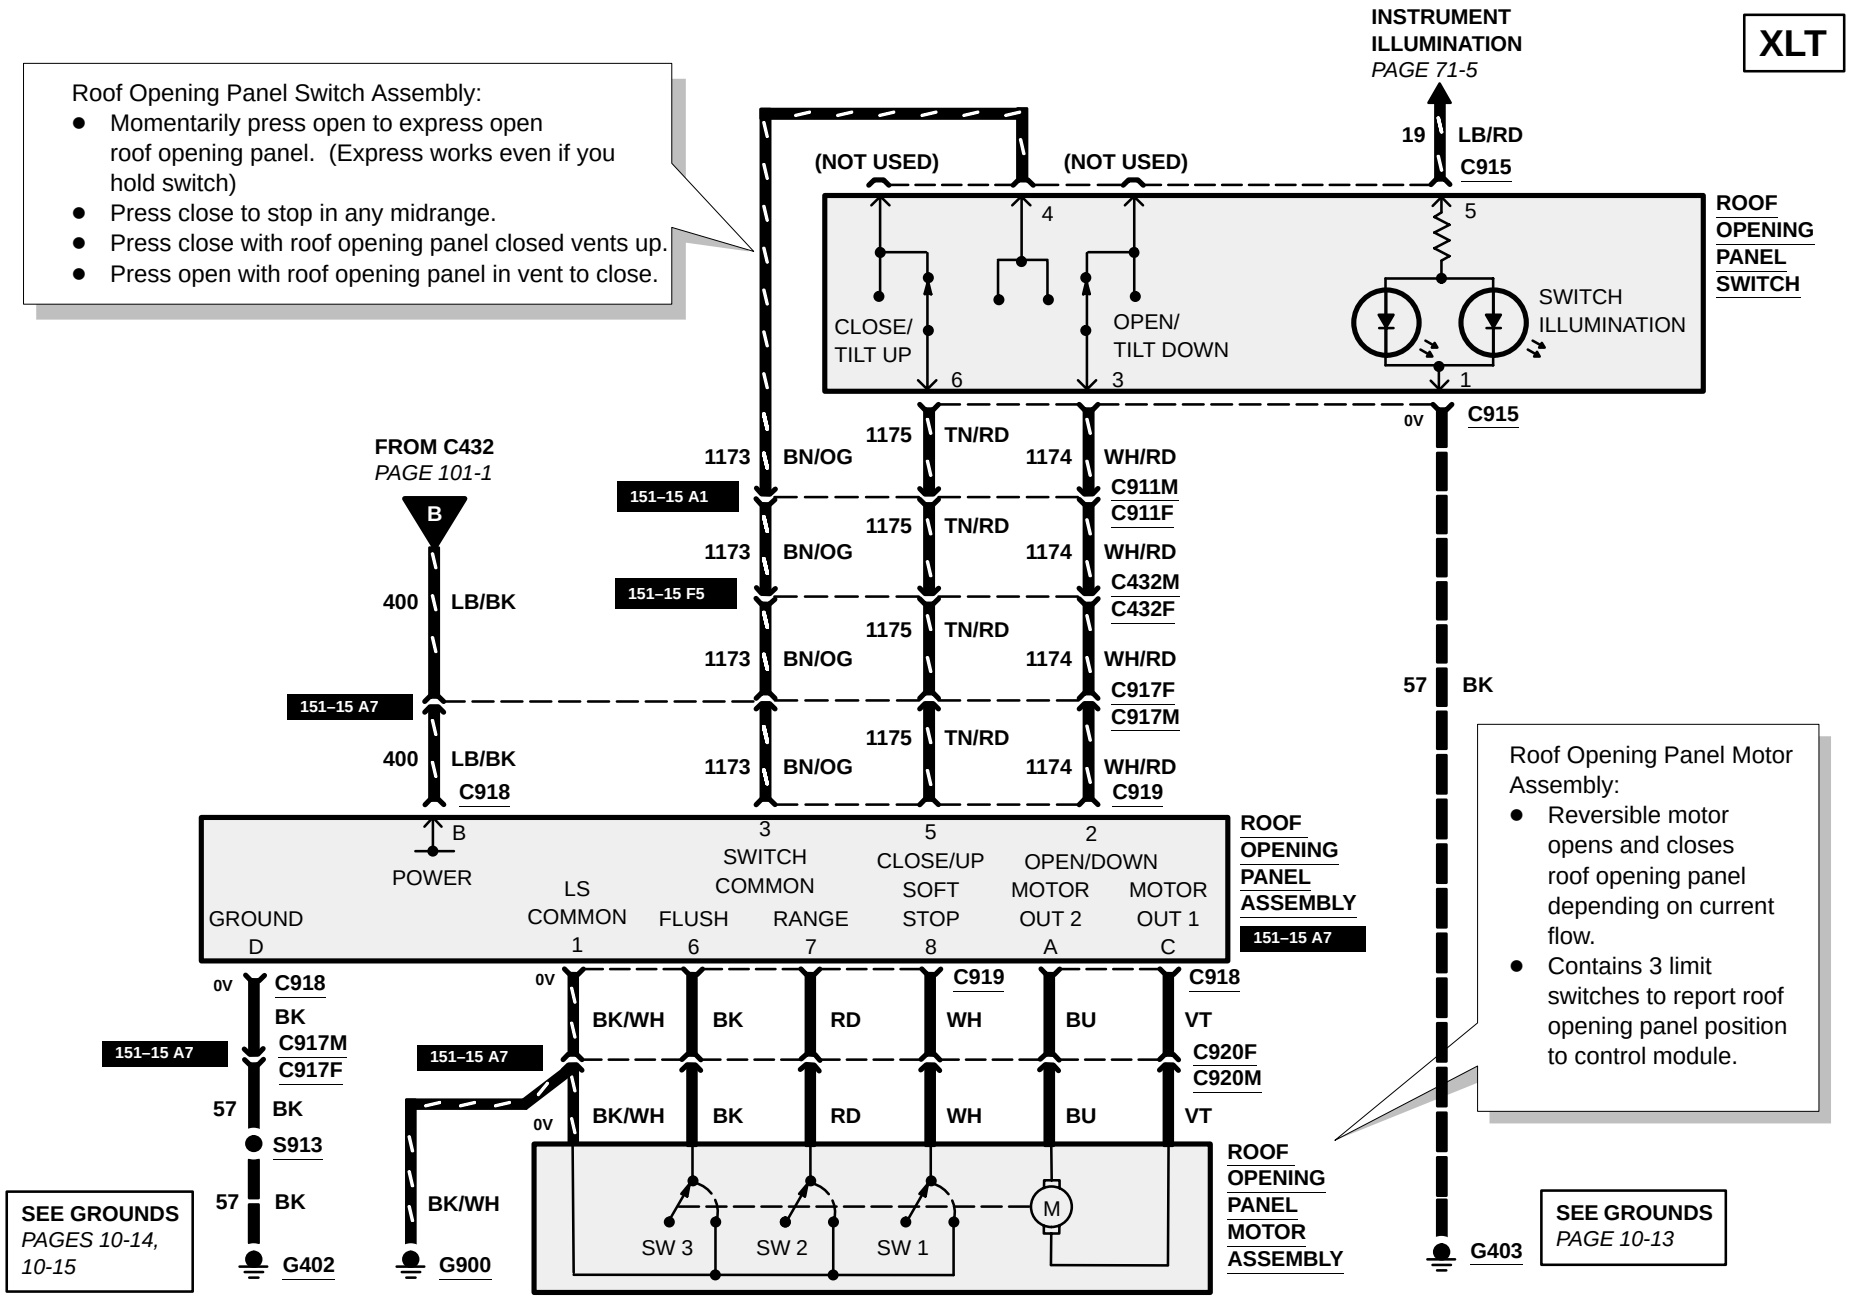
XLT
INSTRUMENT ILLUMINATION
PAGE 71-5
19 LB/RD C915
(NOT USED)
(NOT USED)
ROOF OPENING PANEL SWITCH
CLOSE/ TILT UP
OPEN/ TILT DOWN
SWITCH ILLUMINATION
4
5
6
3
1
0V C915
FROM C432
PAGE 101-1
B
400 LB/BK
151–15 A1
151–15 F5
151–15 A7
400 LB/BK C918
1173 BN/OG
1175 TN/RD
1174 WH/RD
C911M
C911F
C432M
C432F
C917F
C917M
C919
57 BK
Roof Opening Panel Switch Assembly:
Momentarily press open to express open roof opening panel. (Express works even if you hold switch)
Press close to stop in any midrange.
Press close with roof opening panel closed vents up.
Press open with roof opening panel in vent to close.
Roof Opening Panel Motor Assembly:
Reversible motor opens and closes roof opening panel depending on current flow.
Contains 3 limit switches to report roof opening panel position to control module.
B
POWER
GROUND D
LS COMMON 1
3 SWITCH COMMON FLUSH 6
RANGE 7
5 CLOSE/UP SOFT STOP 8
2 OPEN/DOWN MOTOR OUT 2 A
MOTOR OUT 1 C
ROOF OPENING PANEL ASSEMBLY
151–15 A7
0V C918
BK
C917M
C917F
57 BK
S913
57 BK
G402
SEE GROUNDS PAGES 10-14, 10-15
BK/WH
G900
0V C919
BK/WH BK RD WH BU
C918
VT
C920F
C920M
SW 3
SW 2
SW 1
M
ROOF OPENING PANEL MOTOR ASSEMBLY
G403
SEE GROUNDS PAGE 10-13