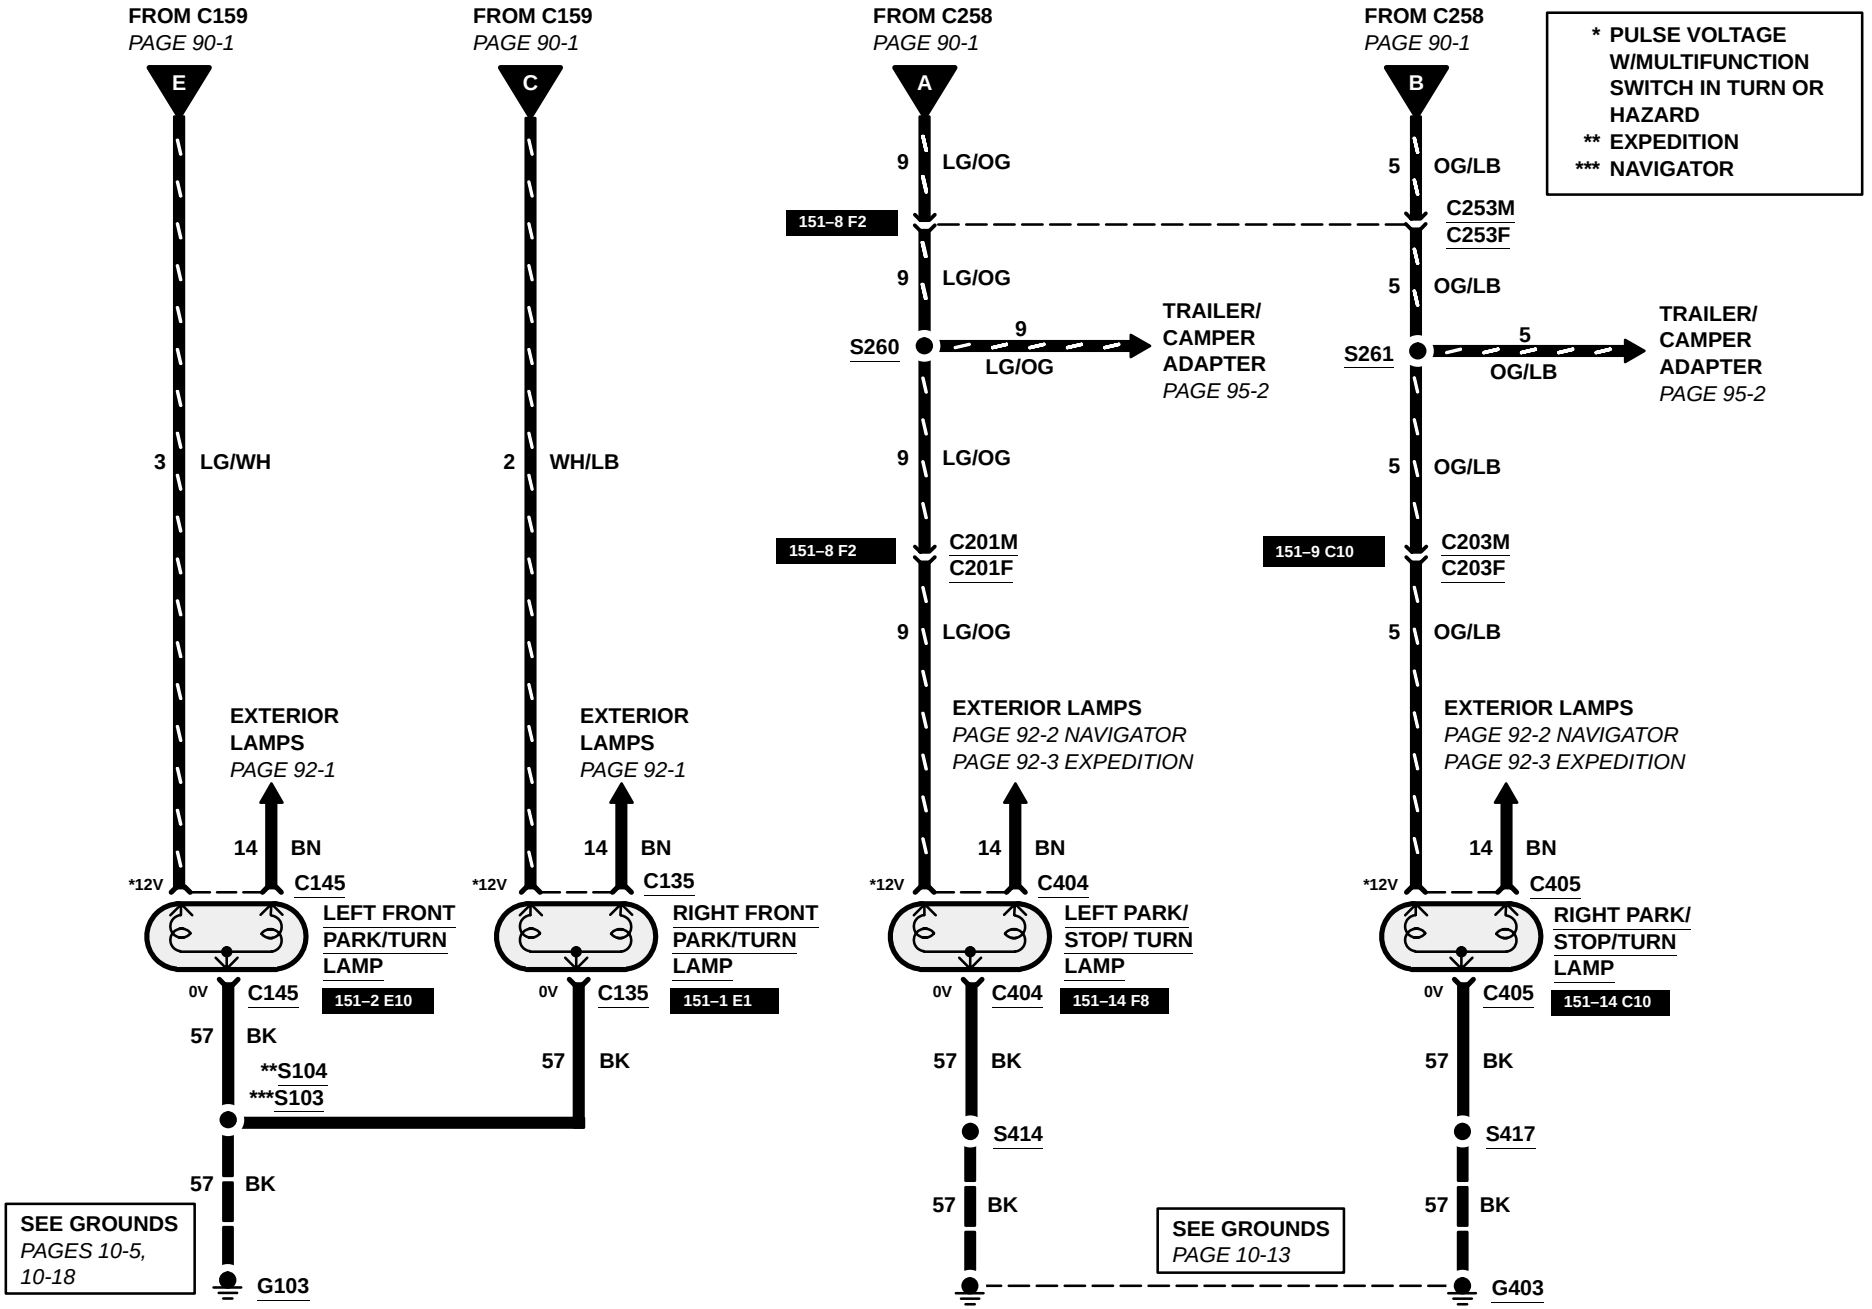
FROM C159
PAGE 90-1
E
3 LG/WH
EXTERIOR LAMPS
PAGE 92-1
14 BN
*12V
C145
LEFT FRONT PARK/TURN LAMP
0V
C145
151–2 E10
57 BK
**S104
***S103
57 BK
SEE GROUNDS
PAGES 10-5, 10-18
G103
FROM C159
PAGE 90-1
C
2 WH/LB
EXTERIOR LAMPS
PAGE 92-1
14 BN
*12V
C135
RIGHT FRONT PARK/TURN LAMP
0V
C135
151–1 E1
57 BK
FROM C258
PAGE 90-1
A
9 LG/OG
151–8 F2
9 LG/OG
S260
9 LG/OG
TRAILER/ CAMPER ADAPTER
PAGE 95-2
9 LG/OG
151–8 F2
C201M
C201F
9 LG/OG
EXTERIOR LAMPS
PAGE 92-2 NAVIGATOR
PAGE 92-3 EXPEDITION
14 BN
*12V
C404
LEFT PARK/ STOP/ TURN LAMP
0V
C404
151–14 F8
57 BK
S414
57 BK
FROM C258
PAGE 90-1
B
5 OG/LB
C253M
C253F
5 OG/LB
S261
5 OG/LB
TRAILER/ CAMPER ADAPTER
PAGE 95-2
5 OG/LB
151–9 C10
C203M
C203F
5 OG/LB
EXTERIOR LAMPS
PAGE 92-2 NAVIGATOR
PAGE 92-3 EXPEDITION
14 BN
*12V
C405
RIGHT PARK/ STOP/TURN LAMP
0V
C405
151–14 C10
57 BK
S417
57 BK
SEE GROUNDS
PAGE 10-13
G403
* PULSE VOLTAGE W/MULTIFUNCTION SWITCH IN TURN OR HAZARD
** EXPEDITION
*** NAVIGATOR