C385

14K733

A7
ABS control module

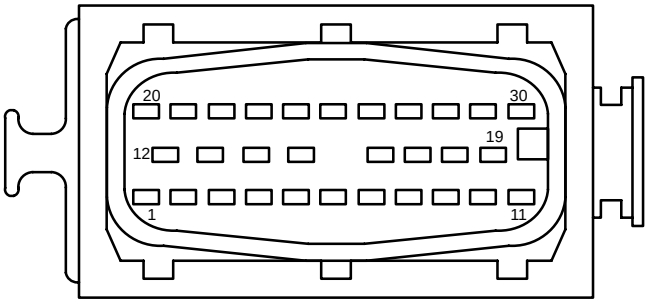

F30001

Pin	Circuit	Circuit Function
1	–	not used
2	8-CF40 (WH/GN)	Sensor signal
3	9-CF40 (BN/GN)	Sensor signal return (reference/ground)
4	8-CF38 (WH/RD)	Sensor signal
5	9-CF38 (BN/RD)	Sensor signal return (reference/ground)
6	15S-CF58 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), switched
7	–	not used
8	15-CF6 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)
9	31S-CF45 (BK/GN)	Ground, switched
10	–	not used
11	–	not used
12	31-CF6A (BK)	Ground
13	30-CF6A (RD)	Voltage supplied at all times (not overload protected)
14	30-CF6B (RD)	Voltage supplied at all times (not overload protected)

Pin	Circuit	Circuit Function
15	31-CF6B (BK)	Ground
16	31S-GC6A (BK/YE)	Ground, switched
17	31S-CF54 (BK/WH)	Ground, switched
18	31S-CF45A (BK/GN)	Ground, switched
19	–	not used
20	8-CF32 (WH)	Sensor signal
21	9-CF32 (BN)	Sensor signal return (reference/ground)
22	8-CF34 (WH/BU)	Sensor signal
23	9-CF34 (BN/BU)	Sensor signal return (reference/ground)
24	8-CF29 (WH/VT)	Sensor signal
25	31S-CF28 (BK/RD)	Ground, switched
26	–	not used
27	–	not used
28	–	not used
29	5-CF6 (BU)	Data link, bus negative
30	4-CF6 (GY)	Data link, bus positive