-1

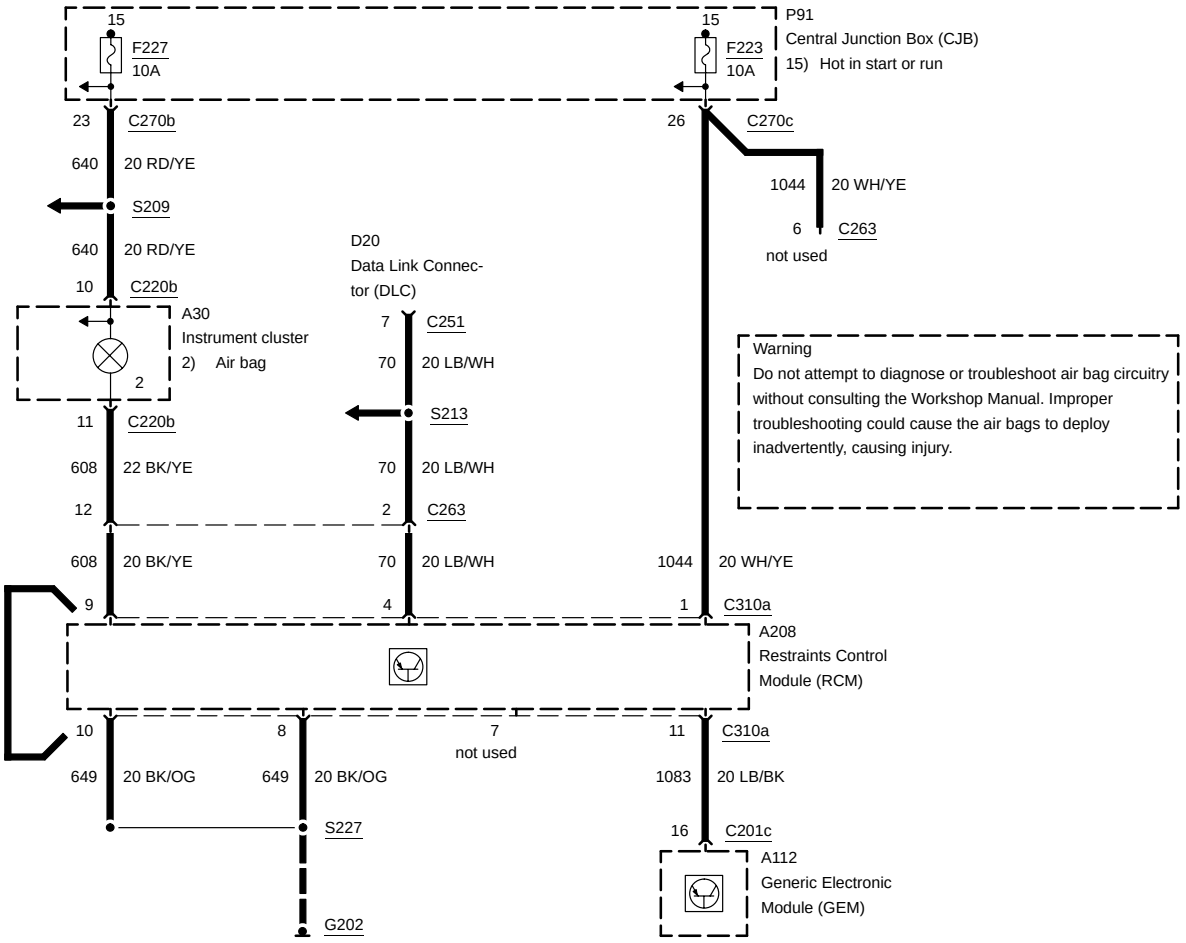
15
F227
10A
15
F223
10A
P91
Central Junction Box (CJB)
15) Hot in start or run
23
C270b
640
20 RD/YE
S209
640
20 RD/YE
10
C220b
A30
Instrument cluster
2) Air bag
2
11
C220b
608
22 BK/YE
12
608
20 BK/YE
9
D20
Data Link Connec-
tor (DLC)
7
C251
70
20 LB/WH
S213
70
20 LB/WH
2
C263
70
20 LB/WH
4
26
C270c
1044
20 WH/YE
6
C263
not used
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
1044
20 WH/YE
1
C310a
A208
Restraints Control
Module (RCM)
10
649
20 BK/OG
8
649
20 BK/OG
S227
G202
7
not used
11
C310a
1083
20 LB/BK
16
C201c
A112
Generic Electronic
Module (GEM)