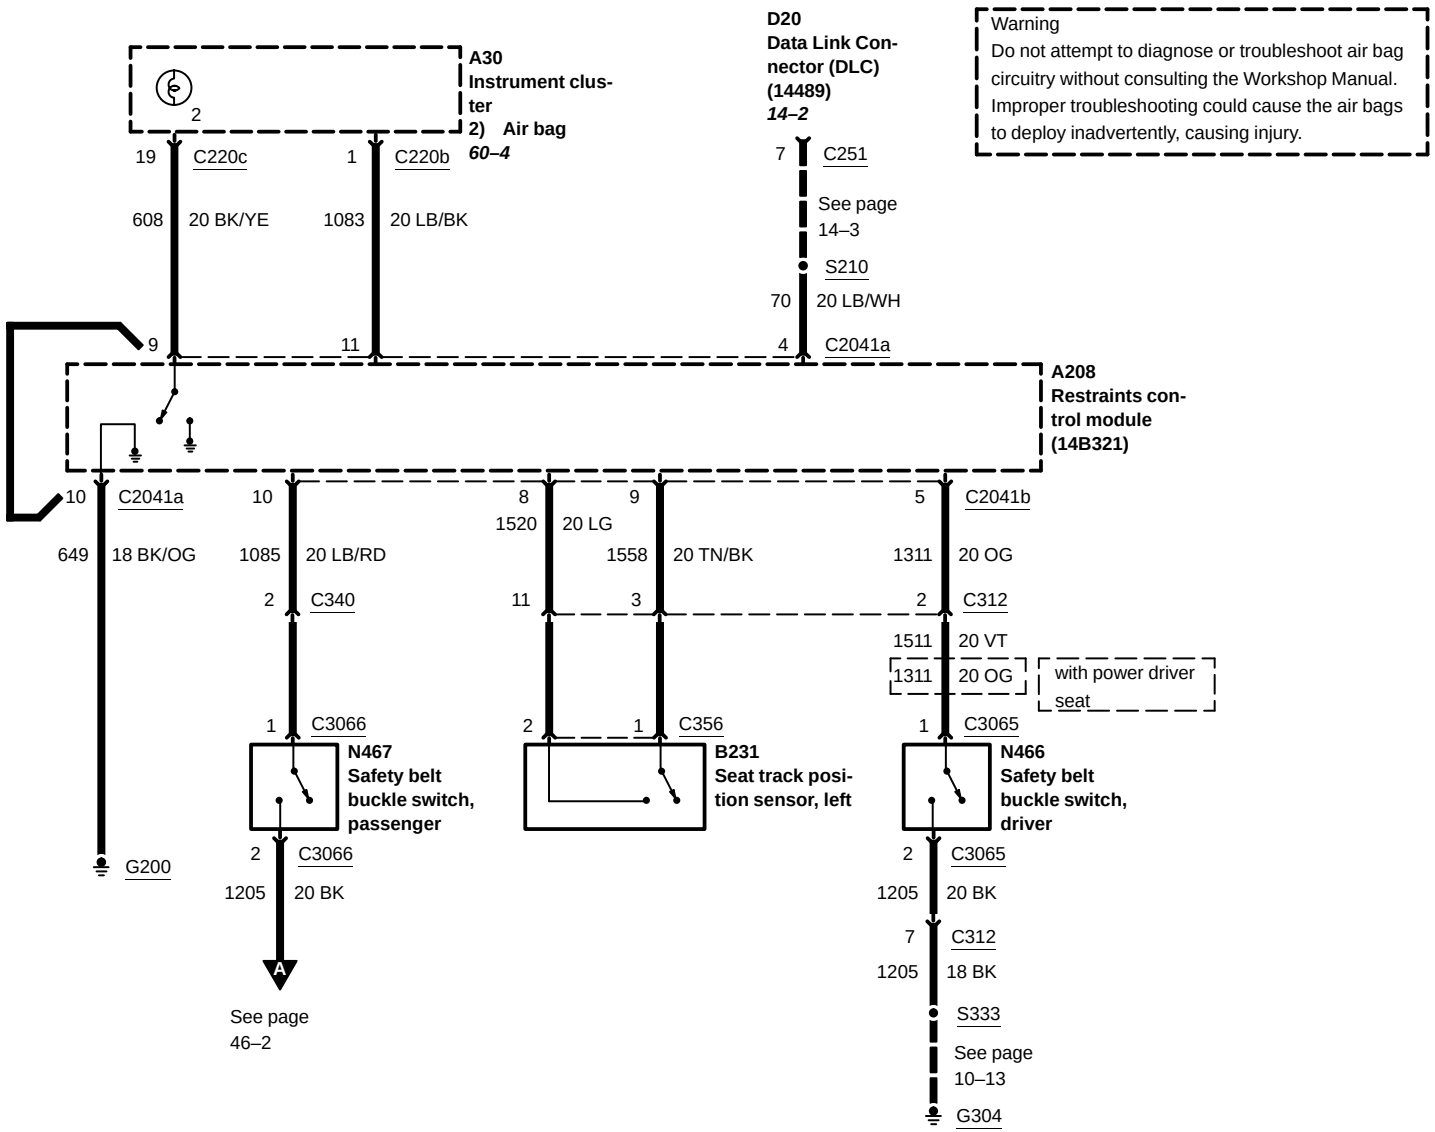
A30
Instrument cluster
2) Air bag
60–4
D20
Data Link Connector (DLC)
(14489)
14–2
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
19 C220c
608 20 BK/YE
1 C220b
1083 20 LB/BK
7 C251
See page 14–3
S210
70 20 LB/WH
4 C2041a
9
11
A208
Restraints control module
(14B321)
10 C2041a
649 18 BK/OG
G200
10
1085 20 LB/RD
2 C340
1 C3066
N467
Safety belt buckle switch, passenger
2 C3066
1205 20 BK
A
See page 46–2
8
1520 20 LG
9
1558 20 TN/BK
11
3
2 C356
1
B231
Seat track position sensor, left
5 C2041b
1311 20 OG
2 C312
1511 20 VT
1311 20 OG
with power driver seat
1 C3065
N466
Safety belt buckle switch, driver
2 C3065
1205 20 BK
7 C312
1205 18 BK
S333
See page 10–13
G304