C2075

14401

K126
Accessory delay relay

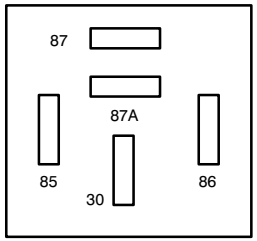

F05129

Pin	Circuit	Circuit function
30	517 (BK/WH)	Voltage supplied at all times (overload protected)
85	194 (PK)	Window safety relay, switched output
86	517 (BK/WH)	Voltage supplied at all times (overload protected)
87	193 (YE/LG)	Window safety relay, switched output
87A	–	not used

C2089

14401

N449
Adjustable pedal switch

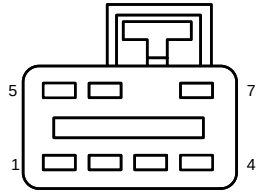

F07055

Pin	Circuit	Circuit function
1	1492 (LB/RD)	memory, Adjustable pedal switch, Rearward
	1495 (RD)	Adjustable pedal switch, Rearward
2	797 (LG/VT)	Voltage supplied at all times (overload protected)
3	57 (BK)	Ground
4	57 (BK)	Ground
5	484 (OG/BK)	Headlamp switch, on input
6	57 (BK)	Ground
7	1493 (PK/BK)	memory, Adjustable pedal switch, Forward
	1494 (RD)	Memory, Adjustable pedal switch, Forward

C2090

14A005

B260
Adjustable pedal memory potentiom-eter

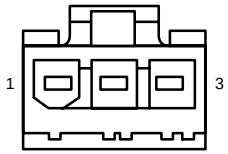

F03111

Pin	Circuit	Circuit function
1	955 (GY)	position, Sensor, to, Right mirror, and, Left mirror
2	1491 (LB/YE)	Adjustable pedal memory potentiometer
3	958 (GY/RD)	Power mirror, left, Up/Down mirror movement, position, Sensor