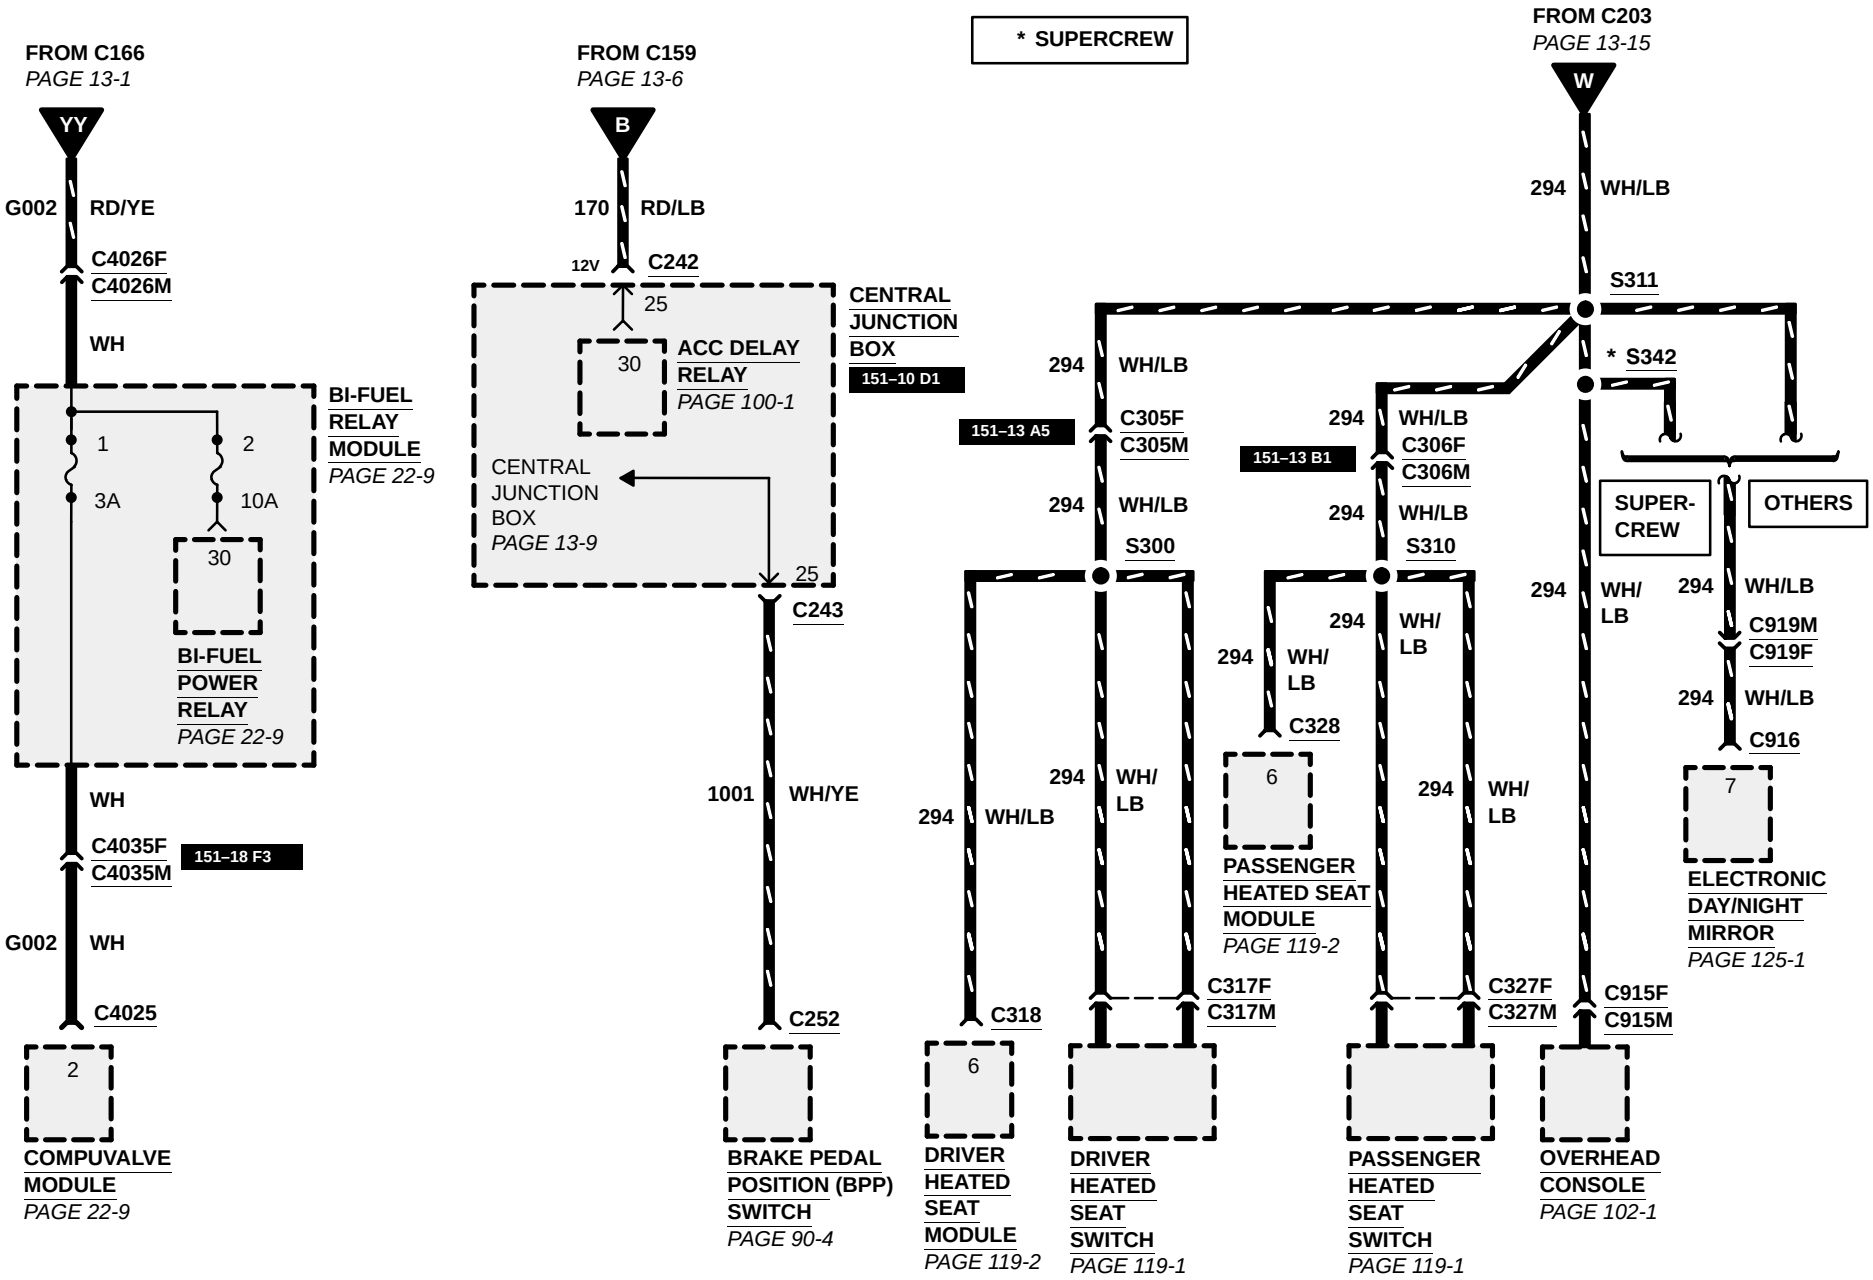
FROM C166
PAGE 13-1
YY
G002
RD/YE
C4026F
C4026M
WH
BI-FUEL RELAY MODULE
PAGE 22-9
1
2
3A
10A
30
BI-FUEL POWER RELAY
PAGE 22-9
WH
C4035F
C4035M
151–18 F3
G002
WH
C4025
2
COMPUVALVE MODULE
PAGE 22-9
FROM C159
PAGE 13-6
B
170
RD/LB
12V
C242
25
30
ACC DELAY RELAY
PAGE 100-1
CENTRAL JUNCTION BOX
151–10 D1
CENTRAL JUNCTION BOX
PAGE 13-9
25
C243
1001
WH/YE
C252
BRAKE PEDAL POSITION (BPP) SWITCH
PAGE 90-4
* SUPERCREW
FROM C203
PAGE 13-15
W
294
WH/LB
S311
* S342
SUPER-CREW
OTHERS
294
WH/LB
C919M
C919F
294
WH/LB
C916
7
ELECTRONIC DAY/NIGHT MIRROR
PAGE 125-1
294
WH/LB
C915F
C915M
OVERHEAD CONSOLE
PAGE 102-1
294
WH/LB
C305F
C305M
151–13 A5
294
WH/LB
S300
294
WH/LB
C318
6
DRIVER HEATED SEAT MODULE
PAGE 119-2
294
WH/LB
C317F
C317M
DRIVER HEATED SEAT SWITCH
PAGE 119-1
294
WH/LB
C306F
C306M
151–13 B1
294
WH/LB
S310
294
WH/LB
C328
6
PASSENGER HEATED SEAT MODULE
PAGE 119-2
294
WH/LB
C327F
C327M
PASSENGER HEATED SEAT SWITCH
PAGE 119-1